


3 Connection

3. Wiring Diagram to the connector, X4 Connecting Example to Host Controller

Connection between MINAS A6 and FP7-AFP7PP02T/L(2-axes) AFP7PP04T/L(4-axes) Panasonic devices SUNX.

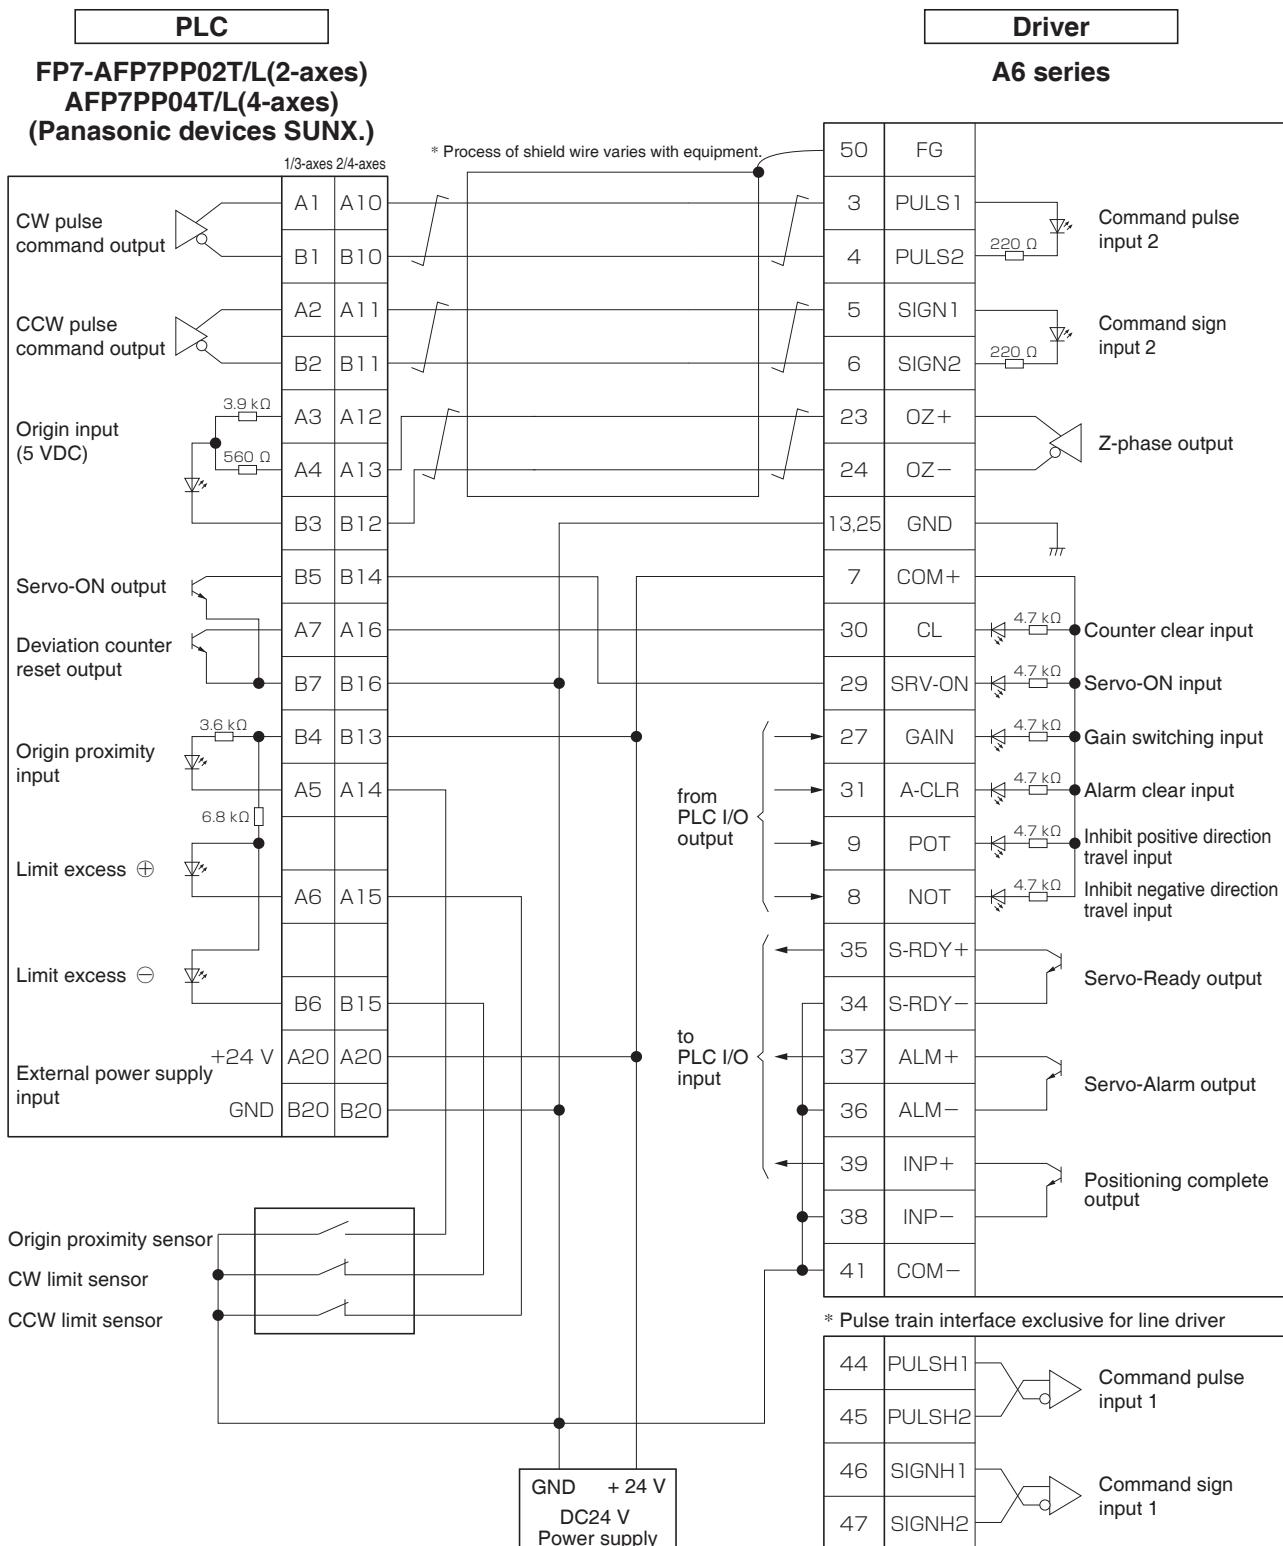

* When connecting, please make sure to use twisted-pair cable.

* The internal circuit of the host controller may be changed. About the latest information please confirm to host controller maker.

Pulse train interface exclusive for line driver.
Use this interface when you use pulse command frequency between 500 kpulse/s and 8 Mpulse/s

Note



represents twisted pair wire.

Related page



• P.3-33 "Inputs and outputs on connector X4"