



OUTPUT CURRENT CLAMP

INPUT

36V

OUTPUT

28V

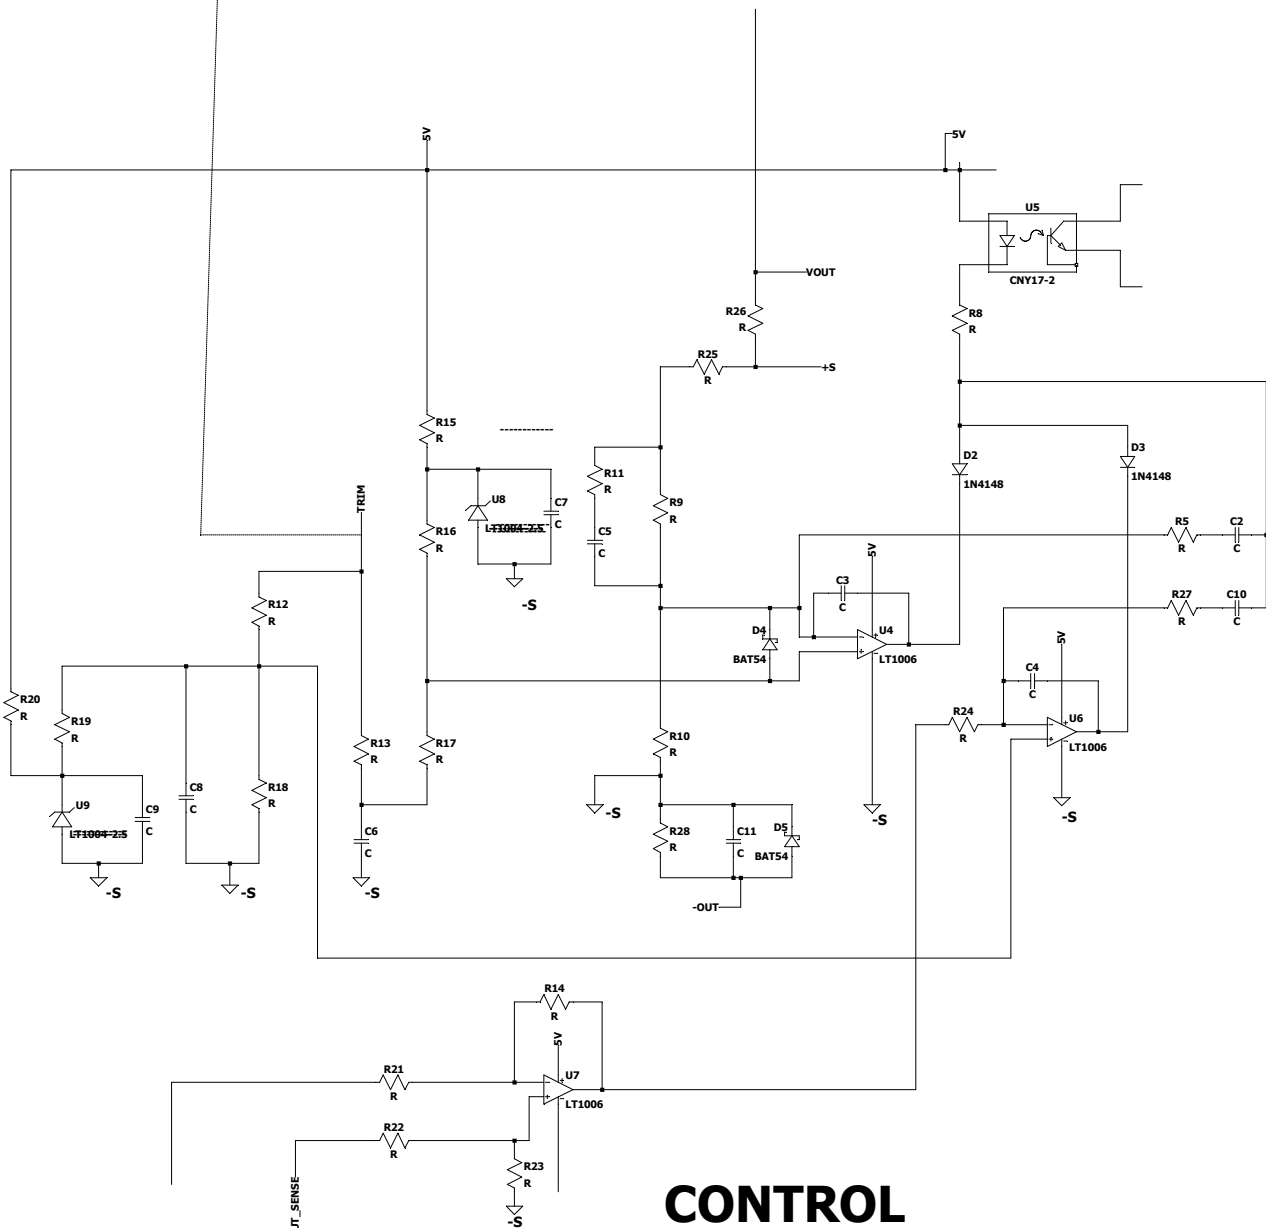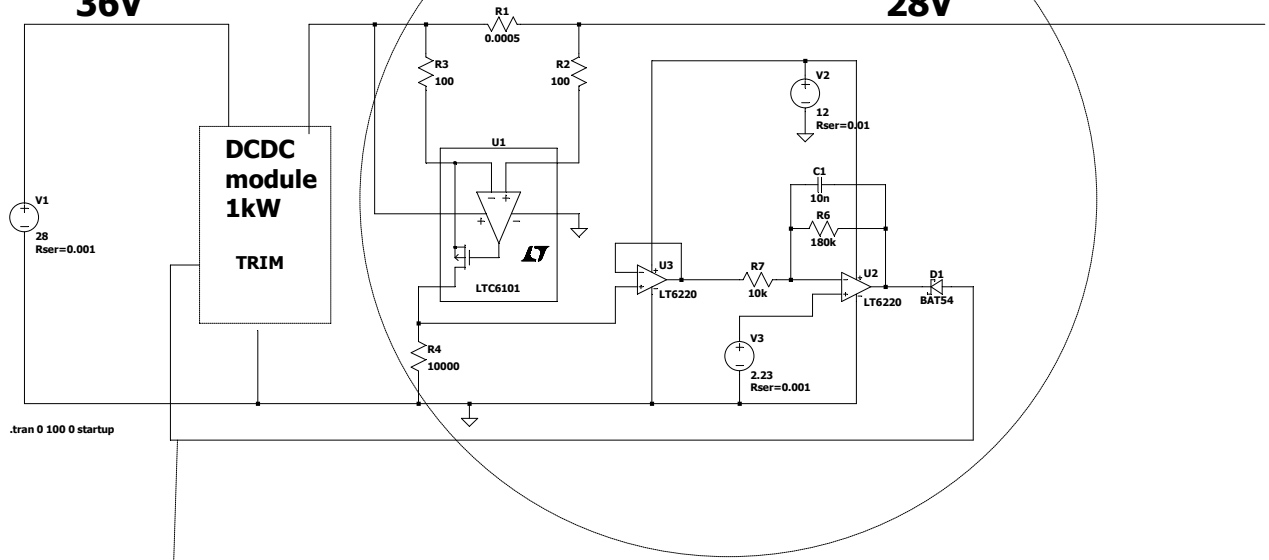

Presumably
sense resistor
here

CONTROL CIRCUIT

--- C:\fromu_SENSE TRIM\Sense and TRIM_220209.asc ---