
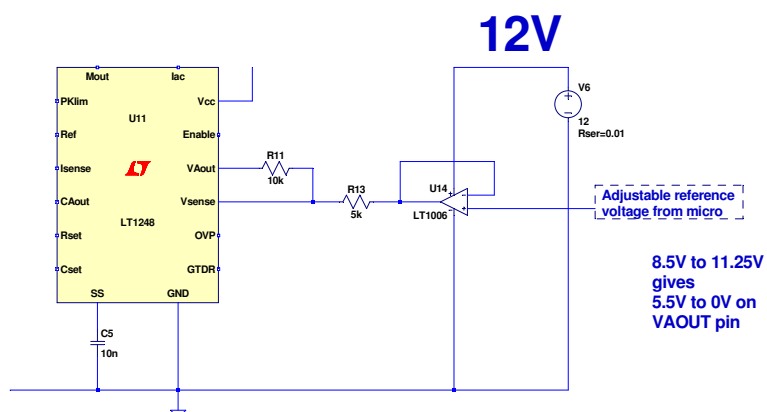
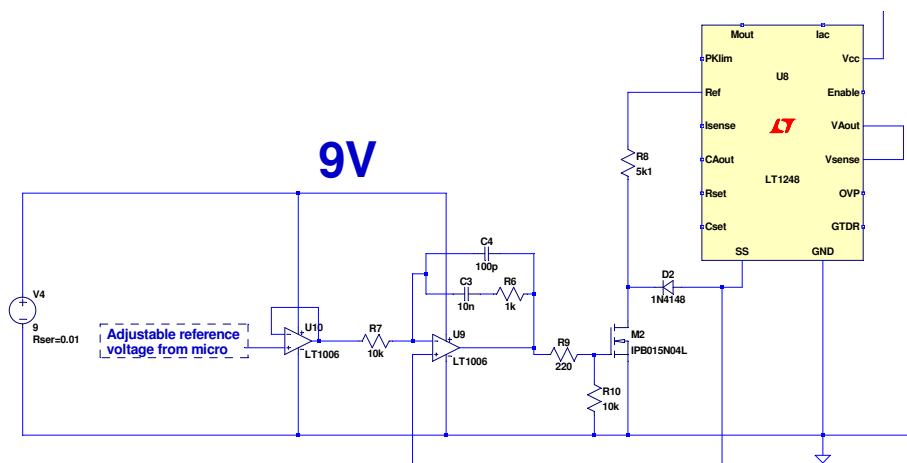
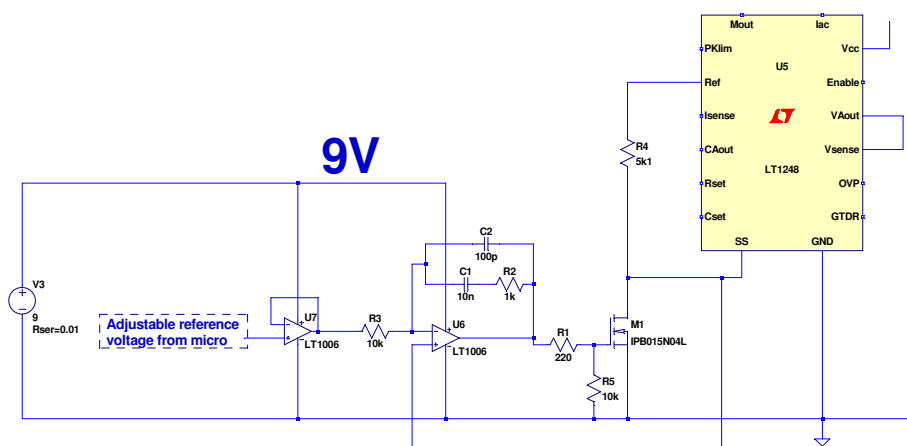
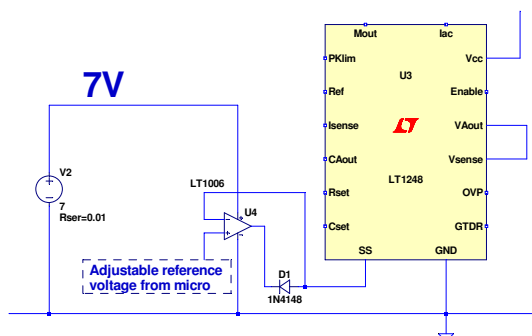


Effecting a voltage to the VAOUT pin of LT1248 (VAOUT cannot be directly driven as its the output of the internal voltage error amplifier)

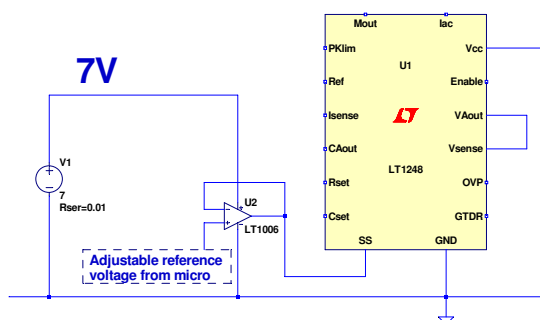

--- C:\forum\lt1248\LT1248.asc ---