

LM13232AFW-1 is parallel setting, but you can change to serial mode by change the Jump as follow:

JP21=keep open

JP3=open

JP4=close

pin4, 6~12=VDD or VSS

pin13=SCLK

pin14=SID

pin16=/CS1

pin18=/RST