


CCM, Current Mode, FULL BRIDGE SMPS, 150WRough General Idea simulation

.ic V(out) = 240V

VOUT = 240VDC
POUT = 150W

VIN = 12VDC

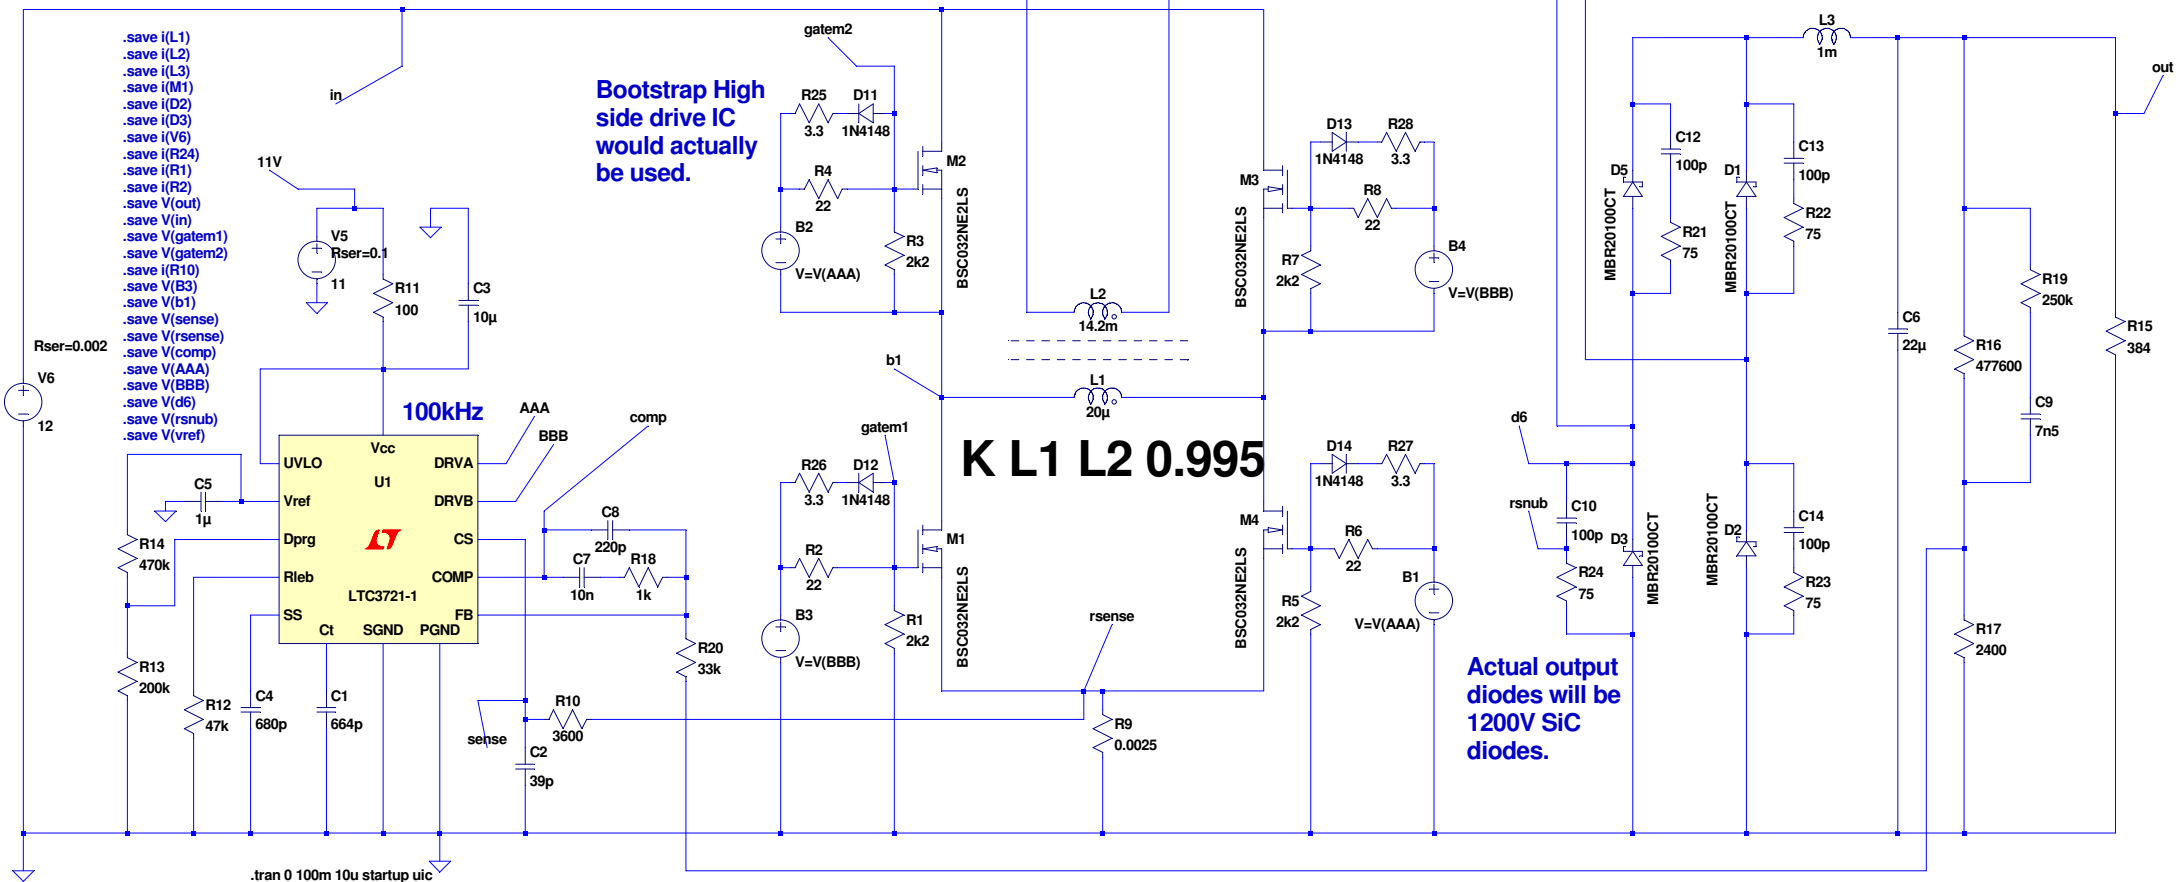

Isolated Feedback via opto would actually be used instead of this