


## HALF BRIDGE SMPS

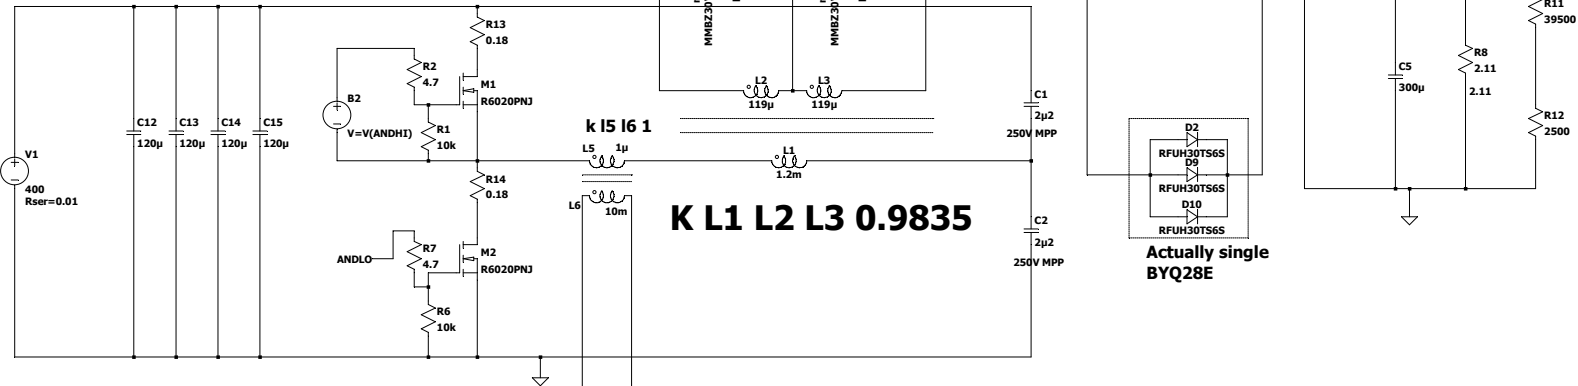


$I = -I(L5)/100$

### 400V Boost PFC output



```
.SAVE V(VOUT)
.SAVE I(L1)
```

**833W Max.**  
**42V to 62V.**  
**42V at 833W.**  
**62V at min load = 5W (fans)**

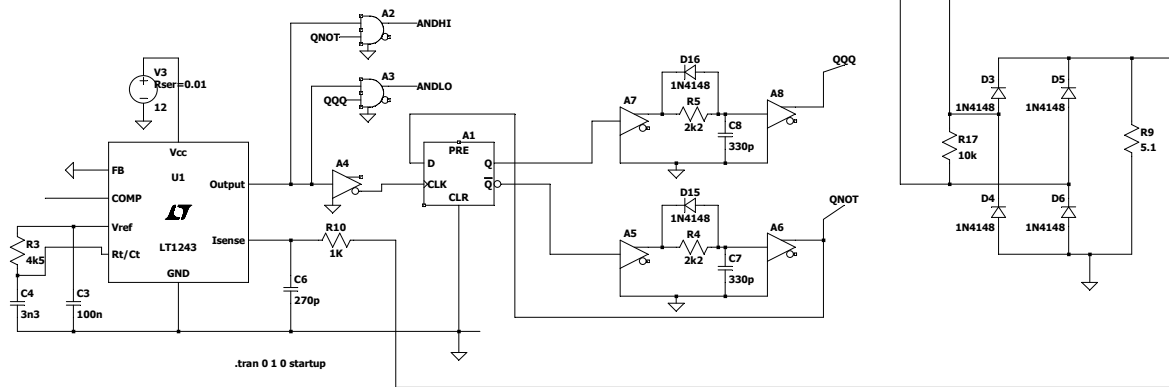

--- C:\fromu\harf brij unregd\HALF BRIDGE SMPS.asc ---