14"/21" COLOR TV BASIC SCHEMATIC DIAGRAM

Model: KLX-S11Z Ver: A02

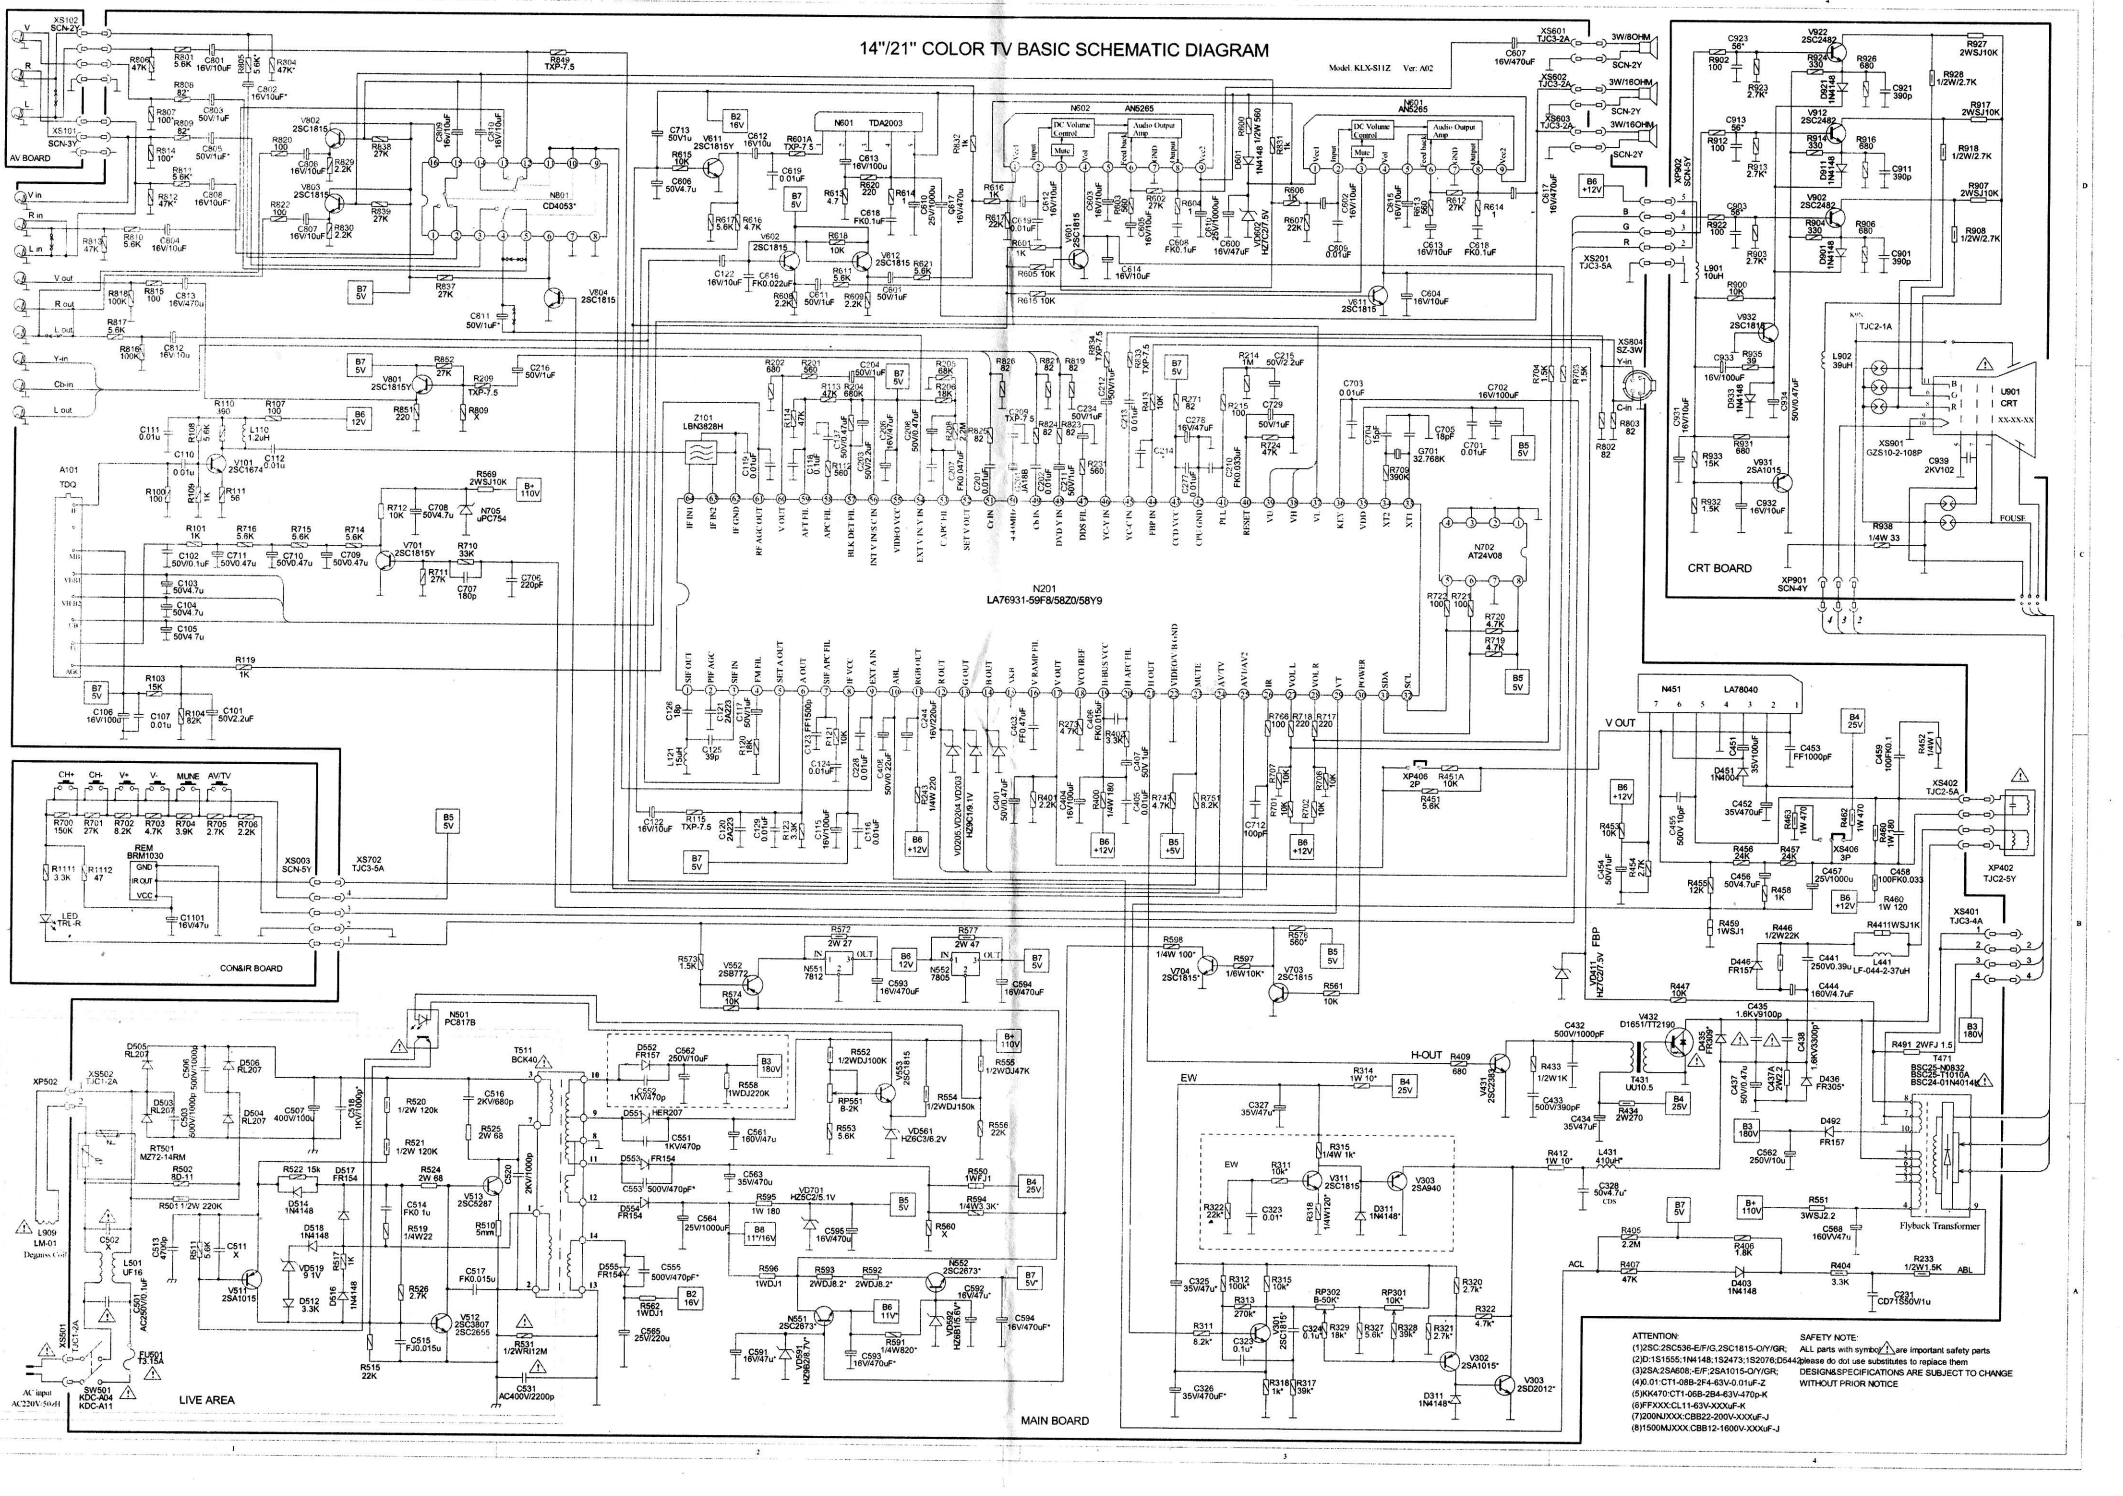

ATTENTION:
(1)2SC:2SC535-E/F/G,2SC1815-O/Y/GR;
(2)D:1S1555,1N4148;1S2473;1S2076;D564
(3)2SA:2SA608-E/F;2SA1015-O/Y/GR;
(4)0.01:CT1-08B-2F4-63V-0.01uF-Z
(5)KK470:CT1-06B-2B4-63V-470p-K
(6)FFXXX:CL11-63V-XXXuF-K
(7)200MJXXX:CBB22-200V-XXXuF-J
(8)1500MJXXX:CBB12-1600V-XXXuF-J

SAFETY NOTE:
ALL parts with symbol △1 are important safety parts
please do not use substitutes to replace them
DESIGN&SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE