

here in this formula the effect of multipliers phase noise has not been considered

System Phase Noise Calculations

Joseph D. DiBona, Senior Engineer Spectrum Microwave

Correlated and Uncorrelated Components


When calculating the phase noise of a system there are many considerations. The following illustrates phase noise calculation of a system and the effects of *correlated* components versus *uncorrelated* components. Following these calculations there is an illustration showing consideration of absolute power levels and how they affect the phase noise of a system.

Let us assume the phase noise for each component at a single offset frequency, say 100 kHz is the following in dBc/Hz:


Phase Noise of each Component

Source	S1 = -150	2nd Doubler	D2 = -155
1st Doubler	D1 = -155	3rd Doubler	D3 = -155
1st Amp.	A1 = -165	2nd Amp.	A2 = -165


We will start off with a doubler and amplifier:

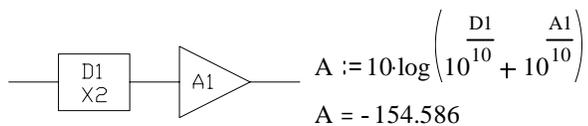

If we have a component preceding a doubler or any multiplier, its phase noise will be degraded by 20 log of the multiplication factor.

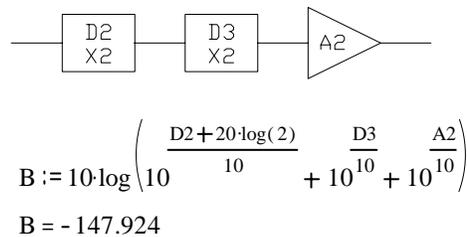


Let's consider a mixer. If we have two *uncorrelated* sources with the same phase noise characteristics conditioned by these components and fed into a mixer the calculations and result would be as follows:

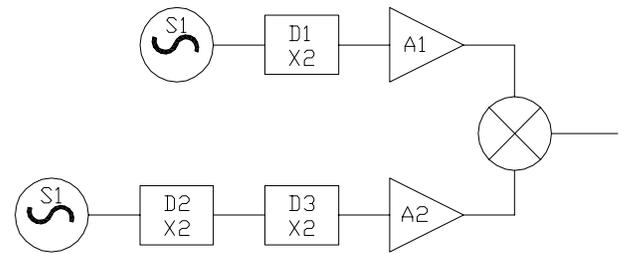

$$U := 10 \cdot \log \left(10^{\frac{S1 + 20 \cdot \log(2)}{10}} + 10^{\frac{S1 + 20 \cdot \log(4)}{10}} + 10^{\frac{A1}{10}} + 10^{\frac{A2}{10}} \right)$$

$$U = -137.0$$

When the output of a single source is split, conditioned and mixed it is considered *correlated*. This would also be true if the two sources above were phase locked to each other. The calculations for the source would be correlated while the other components are not. The result would be higher phase noise.

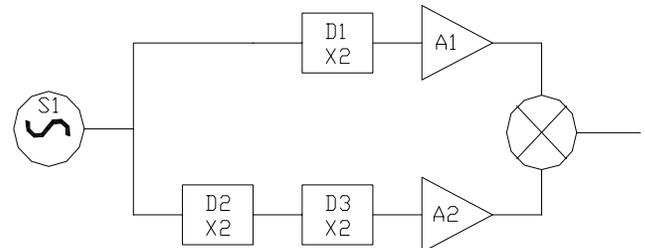

$$U := 10 \cdot \log \left(10^{\frac{D1}{10}} + 10^{\frac{A1}{10}} + 10^{\frac{D2 + 20 \cdot \log(2)}{10}} + 10^{\frac{D3}{10}} + 10^{\frac{A2}{10}} \right)$$

$$U = -147.1$$

$$C := 20 \cdot \log \left(10^{\frac{S1 + 20 \cdot \log(2)}{20}} + 10^{\frac{S1 + 20 \cdot \log(4)}{20}} \right)$$


$$C = -134.4$$

$$R := 10 \cdot \log \left(10^{\frac{C}{10}} + 10^{\frac{U}{10}} \right)$$

$$R = -134.2$$

but here we can see some parts that consider the effect of multiplier phase noises

One can also conclude from this that the phase noise of a doubler made by splitting a source and then combining it in a mixer will be the same as using a passive doubler.

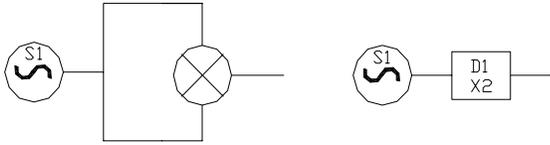

$$S2 := 20 \cdot \log \left(10^{\frac{S1}{20}} + 10^{\frac{S1}{20}} \right)$$

$$S2 = -144$$

$$S2 := S1 + 20 \cdot \log(2)$$

$$S2 = -144$$

Thermal Noise Floor

If the phase noise measurement of a component

Pin := 15
 D2 := 3
 D3 := -9
 A2 := 11

$$N_{\text{floor}} := 10 \cdot \log \left(\frac{-174 - \text{Pin} + 20 \cdot \log(4)}{10} + 10^{\frac{-174 - D2 + 20 \cdot \log(2)}{10}} + 10^{\frac{-174 - D3}{10}} + 10^{\frac{-174 - A2}{10}} \right)$$

$$N_{\text{floor}} = -163.8 \text{ dBc/Hz}$$


is made at the same power levels that will exist in the system the thermal noise floor is already in the result. If the data is recorded at much higher power levels than components will experience in the system or if the engineer would like to know what the power levels must be to maintain a particular phase noise result then the thermal noise floor must be a consideration. The thermal noise floor or kTB

is ~-174 dBm/Hz. This is based on Boltzmann's constant, the temperature, and the bandwidth of the signal.

$$kTB := 10 \cdot \log \left[1.381 \cdot 10^{-23} \cdot (273 + 25) \cdot 1000 \right]$$

$$kTB = -174$$

Thermal noise is specified in dBm. If the phase noise of a component comes close to this power level it will be degraded and there is no method to correct the situation short of filtering for phase noise. The same rules for calculating correlated and uncorrelated components apply as before so let us consider the performance of the following cascade.

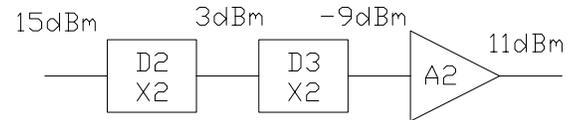

Therefore if the source in this system were ideal it would have a phase noise of -189 dBc/Hz (-174-15). Allowing the power level to drop significantly degrades the system noise performance.

Conclusion

When calculating the phase noise of a system one must pay close attention to power levels and precisely how the signal is used and reused.