


# Power Monitor

1.60

## Features

- Interfaces to up to 32 DC-DC power converters
- Measures power converter output voltages and load currents using a DelSig-ADC
- Monitors the health of the power converters generating warnings and faults based on user-defined thresholds
- Support for measuring other auxiliary voltages in the system
- Support 3.3 V and 5 V chip power supply

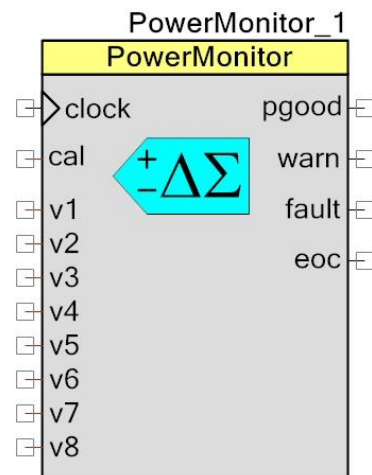

## General Description

### Power Converter Voltage Measurements

For power converter voltage measurements, the ADC can be configured into single-ended mode (0-4.096 V range or 0-2.048 V range). The ADC can also be configurable into differential mode ( $\pm 2.048$  V range) to support remote sensing of voltages where the remote ground reference is returned to PSoC over a PCB trace. In cases where the analog voltage to be monitored equals or exceeds  $V_{dda}$  or the ADC range, external resistor dividers are recommended to scale the monitored voltages down to an appropriate range.

### Power Converter Current Measurements

For power converter load current measurements, the ADC can be configured into differential mode ( $\pm 64$  mV or  $\pm 128$  mV range) to support voltage measurement across a high-side series shunt resistor on the outputs of the power converters. Firmware APIs convert the measured differential voltage into the equivalent current based on the external resistor component value used. The ADC can also be configured into single-ended mode (matching the selected voltage measurement range) to support connection to external current sense amplifiers (CSAs) that convert the differential voltage drop across the shunt resistor into a single ended voltage or to support power converters or hot-swap controllers that integrate similar functionality.

## Auxiliary Voltage Measurements

Up to 4 auxiliary input voltages can be connected to the ADC to measure other system inputs. The ADC can be configured into single ended mode (matching the selected single ended voltage measurement range: 0-4.096 V / 0-2.048V) or differential mode ( $\pm 2.048$  V or matching the selected current measurement range:  $\pm 64$  mV /  $\pm 128$  mV) to measure the auxiliary input voltages.

## ADC Sequential Scanning


The ADC will sequence through all power converters and auxiliary inputs, if enabled, in a round-robin fashion, taking voltage measurements and load current measurements. This component will measure the voltages of all the power converters in the system, but can be configured to measure currents from a subset of the power converters – including no current measurements at all. Doing so will minimize the number of IOs required and will minimize the overall ADC scan time.

This component needs some knowledge of components external to PSoC for 2 reasons:


- Scaling factors for input voltages that have been attenuated to meet IO input range limits or ADC dynamic range limits where applicable
- Scaling factors for current measurements (series resistor, series inductor or CSA gain etc.)

## Component Use Cases


The diagram below shows the connection methodology for a power converter that has an output voltage  $< V_{dda}$ . The voltage sense and current sense points are taken from either side of the sense resistor and can connect directly to this component.

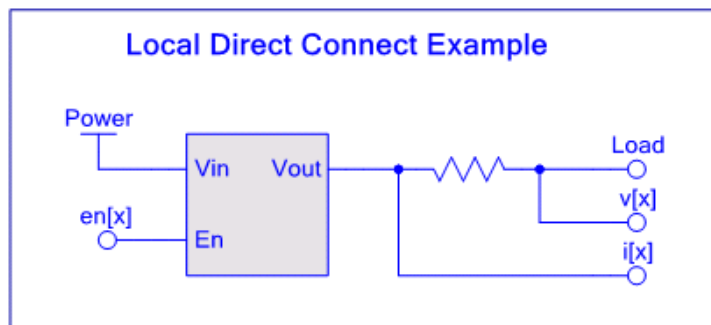


The diagram below shows the connection methodology for a power converter that has an output voltage  $> V_{dda}$ . An external current sense amplifier (CSA) is required to convert the differential voltage drop across the sense resistor to a single-ended voltage that connects directly to this component. The voltage sense point is scaled down to a voltage level that can directly connect to this component.

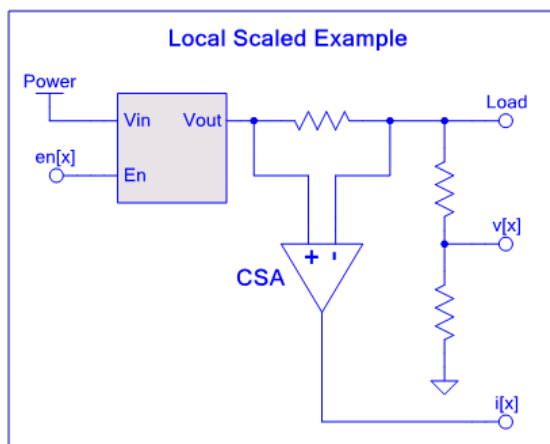

The diagram below shows the connection methodology for a remote power converter that has an output voltage  $< 2.048V$  where the remote voltage sense point and the remote ground reference are both routed back to this component.

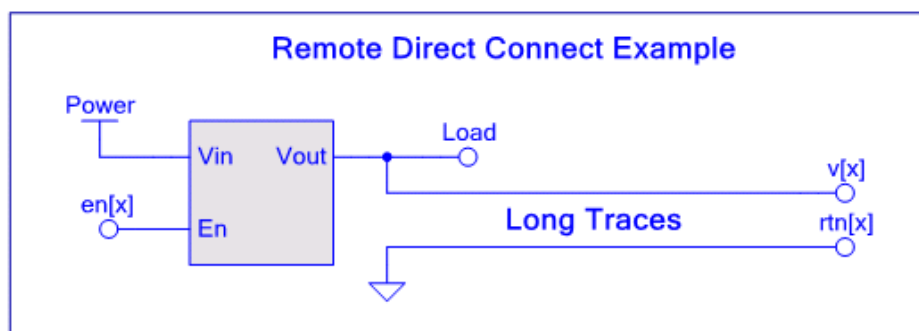

The diagram below shows the connection methodology for a remote power converter that has an output voltage  $> V_{dda}$  where the remote voltage sense point is scaled using resistors and is routed back to this component along with the remote ground reference point.

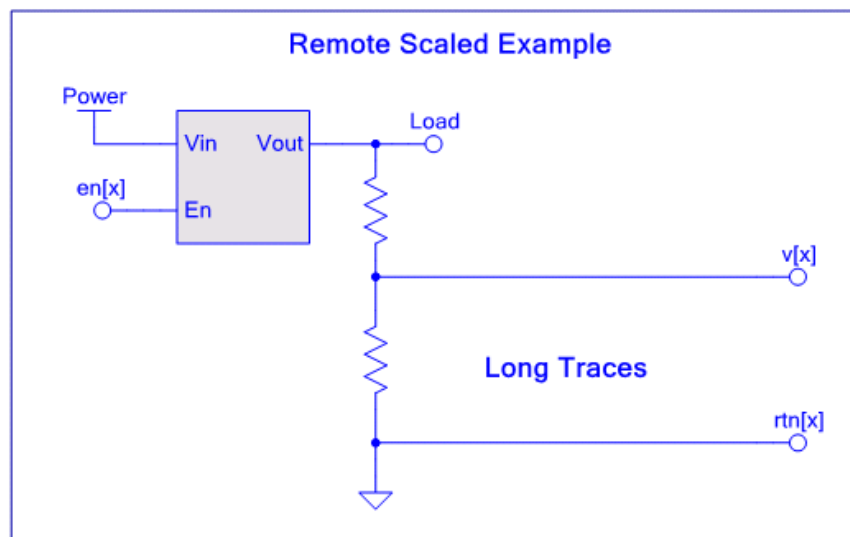

## Input/Output Connections

This section describes the various input and output connections for the Power Monitor. An asterisk (\*) in the list of I/Os states that the I/O may be hidden on the symbol under the conditions listed in the description of that I/O.

### clock – Digital Input

The clock input signal is used to drive all digital output signals. The maximum frequency used for this clock is 66MHz.

### cal – Analog Input \*

The cal input is the calibration voltage input for calibration of the 64mV or 128mV differential voltage ADC range setting. This signal is an optional input connection. When the "cal" pin is exposed, a POR calibration occurs automatically as part of PowerMonitor\_Start() API to calibrate 64mV or 128mV differential voltage ADC range. For subsequent calibrations to occur at run time, PowerMonitor\_Calibrate() API should be used.

**Note** The input voltage given to this pin should not exceed 100% of differential ADC range (either 64mV range or 128mV range) used.

### v[x] – Analog Input

The v[x] are analog inputs that connect to the power converter output voltage as seen by their loads. This could be a direct connection to the power converter output, or a scaled version using external scaling resistors. Every power converter will have voltage measurement enabled. The component supports a maximum of 32 voltage input terminal pins and the unused terminals are hidden.

### i[x] – Analog Input \*

The i[x] are analog inputs that enable this component to measure power converter load currents. This could be a differential voltage measurement across a shunt resistor along with the corresponding v[x] input or could be a single-ended connection to an external CSA. Current monitoring is optional on a power converter by power converter basis. When differential v[x] voltage measurement is selected for a power converter in the component customizer, current measurement is disabled for that power converter in order to limit the number of IOs used by this component. In that case, the i[x] terminal is replaced by the rtn[x] terminal representing the differential voltage measurement return path.

This component supports a maximum of 24 current input terminals and the unused terminals are hidden. These terminals are mutually exclusive with the associated rtn[x] input terminals.

## **rtn[x] – Analog Input \***

The rtn[x] analog inputs connect to a ground reference point that is physically close to the power converter. These terminals are only exposed when differential voltage sensing is enabled for that power converter in the component customizer. These terminals are mutually exclusive with the associated i[x] input terminals. Unused pins are hidden.

## **aux[x] – Analog Input \***

Since this component embeds the only available DeISig ADC converter, the aux[x] analog inputs enable users to connect other auxiliary voltage inputs for measurement by the ADC. Up to 4 auxiliary input terminals are available and these terminals will be hidden if the user does not enable auxiliary input voltage monitoring in the component customizer.

## **aux\_rtn[x] – Analog Input \***

These analog inputs can connect to the auxiliary input voltage ground reference point. Up to 4 aux\_rtn[x] terminals are available. These terminals will be hidden if the user does not enable auxiliary input differential voltage monitoring in the component customizer.

## **eoc – Output**

This digital output signal is an active high pulse with one clock cycle wide, indicating ADC conversion complete for the current sample set. User can specify whether the pulse is asserted after every ADC measurement or just once when one sample has been taken from every analog input (voltages, currents and auxiliary). Users can use this signal to generate an application-specific interrupt to the MCU core or to drive other hardware in their schematic. One simple example might simply be to connect it to a pin to measure the ADC update rate for all the inputs. Another example might be to use the signal to run custom firmware filtering algorithms once all samples are gathered.

## **pgood – Output**

This digital output terminal is driven active high when all power converter voltages and currents (if measured) are within a user specified operating range. The user can mask individual power converters from participating in the generation of the pgood output. An option exists in the customizer to make this terminal a bus to expose the individual pgood status outputs for each converter.

## **warn – Output \***

This digital output terminal is driven active high when one or more power converter voltages or currents (if measured) are outside the user-specified nominal range, but not by enough to be considered a fault condition. Warn pin is "sticky" (it latch HIGH) until the associated APIs are called. To clear the Warn pin, call: `PowerMonitor_GetUVWarnStatus()`, `PowerMonitor_GetOVWarnStatus()` and `PowerMonitor_GetOCWarnStatus()` as applicable. This



terminal will be hidden if the user does not enable any warning source in the component customizer.

### fault – Output \*

This digital output terminal is driven active high when one or more power converter voltages or currents (if measured) are outside the user-specified nominal range to such a degree that it is considered to be a fault condition. Fault pin is "sticky" (it latch HIGH) until the associated APIs are called. To clear the Fault pin, call: `PowerMonitor_GetUVFaultStatus()`, `PowerMonitor_GetOVFaultStatus()` and `PowerMonitor_GetOCFaultStatus()` as applicable. This terminal will be hidden if the user does not enable any fault source in the component customizer.

## Analog Input Pin Assignment Considerations

If manual analog pin assignment is desired to simplify PCB layout, users of this component need to have some appreciation of the analog routing resources available in PSoC 3 in order to make appropriate choices. The analog routing resources are described in detail in the PSoC 3 *Technical Reference Manual* section 32.2. Figure 32.1 of that manual introduces the concept of “left side” vs. “right side” analog routing channels and GPIO ports. Figure 32.2 shows the detailed analog subsystem floor plan including the analog hardware blocks, most notably the DelSig ADC, and all the available analog routing channels.

Here is a summary of the routing resources as they pertain to the ADC:

- Any GPIO input can connect to the positive terminal of the DelSig ADC
- Only odd port pins within a given port (e.g. P0[1,3,5,7], P1[1,3,5,7] etc.) can connect to the negative terminal of the DelSig ADC

With this in mind, users of this component who wish to manually assign pins should follow this procedure to ensure a routable design:

- Assign as many `rtn[x]`, `Direct i[x]`, `aux_rtn[x]` as you can to the left side odd port pins first: P0[1,3,5,7], P2[1,3,5,7], P4[1,3,5,7], P6[1,3,5,7], P15[5]
- Assign any remaining `rtn[x]`, `Direct i[x]`, `aux_rtn[x]` to the right side odd port pins: P3[1,3,5,7], P5[1,3,5,7], P15[1,3], P1[1,3,5,7]
- Assign as many `v[x]`, `aux[x]`, `CSA i[x]` as you can to the left side even port pins first: P0[0,2,4,6], P2[0,2,4,6], P4[0,2,4,6], P6[0,2,4,6], P15[4]
- Assign any remaining `v[x]`, `aux[x]`, `CSA i[x]` to the right side even port pins: P3[0,2,4,6], P5[0,2,4,6], P15[0,2], P1[0,2,4,6]

The following notes should also be considered for optimal performance:


- All P1[x] pins should be used as a last resort since that port contains the JTAG and SWD programming pins and the user will need to take that into account in their PCB design if the intention is to use those pins for digital program/test as well as for analog voltage measurements
- When routing related differential signals, place them next to each other on adjacent pins  
Examples: v[x]=P0[0], rtn[x]=P0[1] or aux[x]=P4[4], aux\_rtn[x]=P4[5]

## Schematic Macro Information

The Power Monitor component implementation includes 3 macros shown below:

### Power Monitor – 8 Rails


The macro supports 8 single-ended voltage inputs and 8 current inputs. The pgood is configured as a single bit logic level output reflecting the power good status of the system.

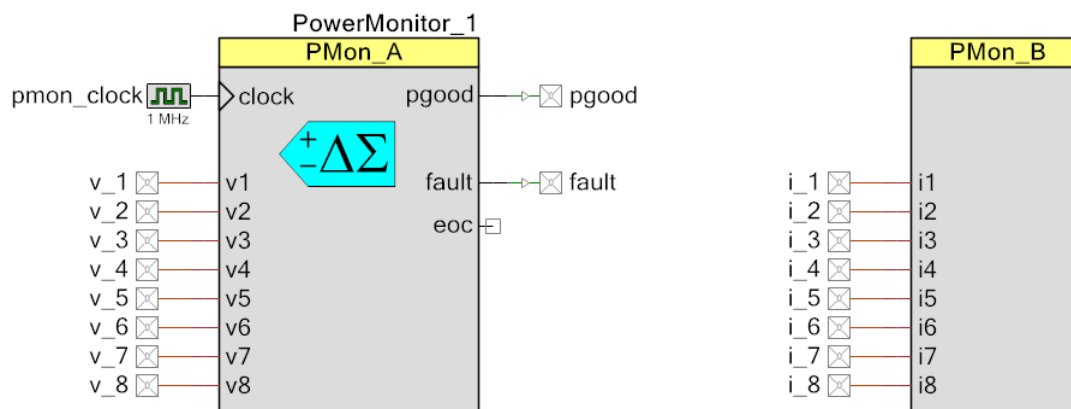

### Power Monitor – 16 Rails

Many off-the-shelf Power Supervisor ASSPs support 16 secondary power converters. This macro is provided to enable users to quickly replicate that functionality. It measures 16 single-ended


voltage inputs and 16 current inputs to support 16 secondary power converters. The pgood is configured as a single bit logic level output reflecting the power good status of the system.

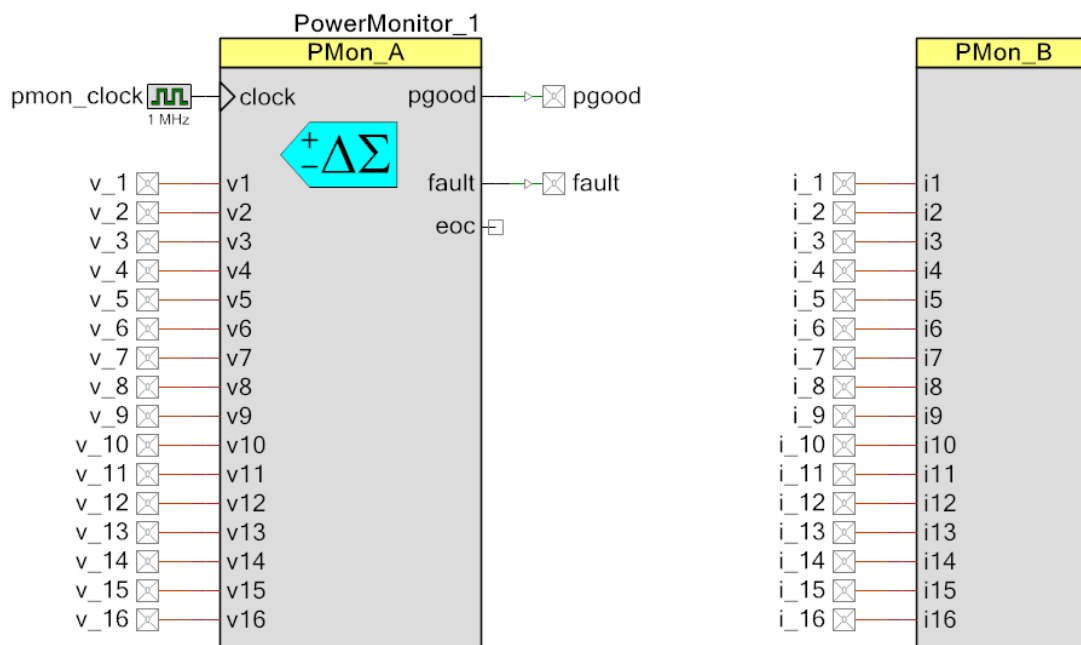

## Power Monitor – 32 Rails

This macro is provided to enable designers to build platform solution supporting the most number of rails in the industry. The macro supports 32 single-ended voltage inputs and 16 current inputs.

The pgood is configured as a single bit logic level output reflecting the power good status of the system.

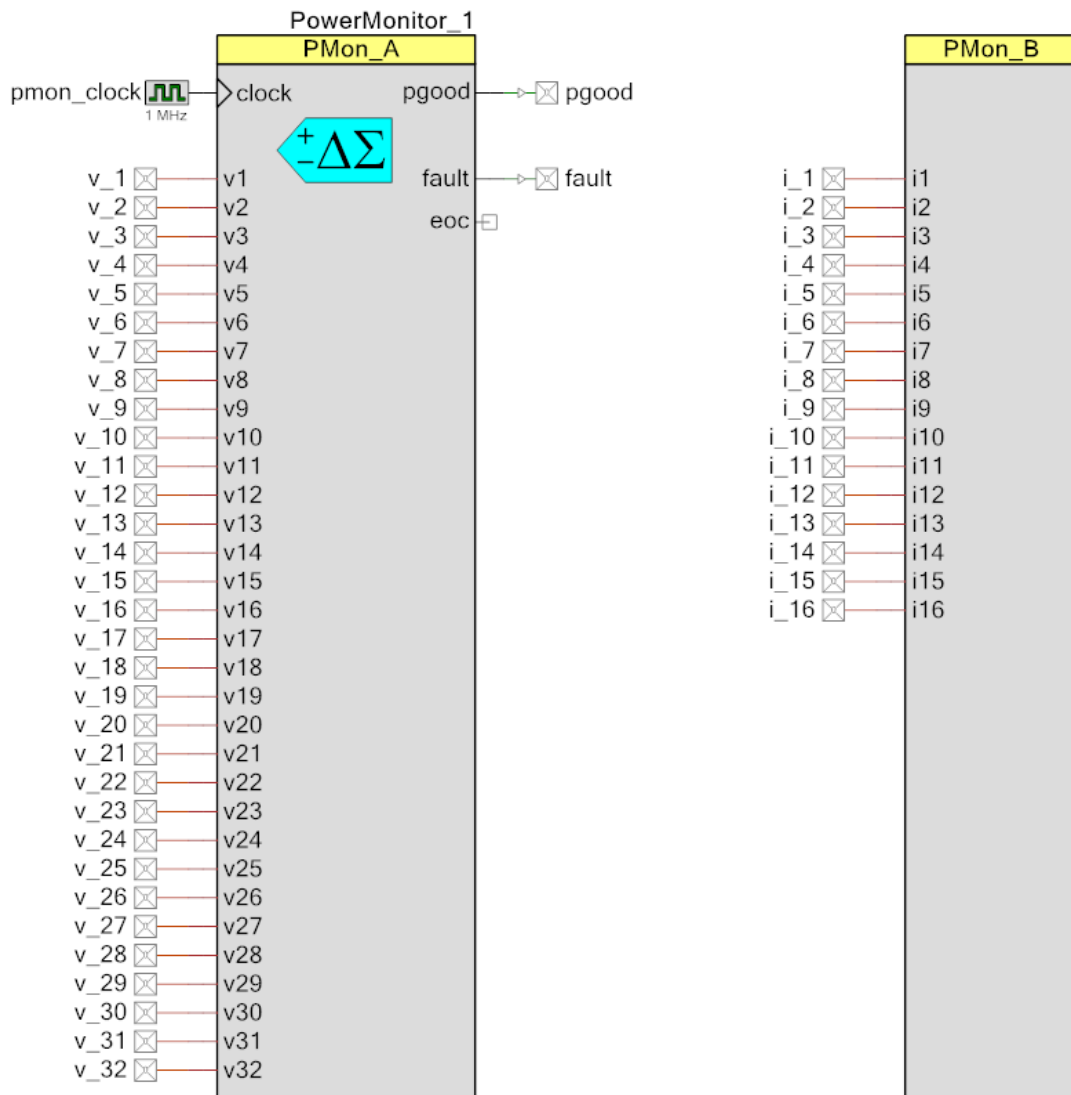

## Component Parameters

Drag a Power Monitor onto your design and double click it to open the Configure dialog. The dialog is divided into four tabs.

### General Tab

### Load configuration

Restores all customizer settings, including tables, from an external file. Keyboard shortcut – [Ctrl] [L]

### Save configuration

Stores all customizer settings, including tables, in an external file. Keyboard shortcut – [Ctrl] [S]

### Number of converters

This parameter determines the number of converters to be monitored. The range of supported converters is 1 – 32. The default number of converters is set to **8**.

### Number of auxiliary channels

This parameter determines the number of auxiliary voltage sources to be measured. The maximum supported auxiliary voltage sources are **4**. The default value is **0**.

### Pgood terminal

This parameter determines whether the pgood output terminal is to be displayed as a **bus** terminal or a **single** output terminal. If this parameter is set to **Individual**, then the pgood output terminal is displayed as bus. The pgood terminal becomes a single terminal if this parameter is set to **Global**.

### EOC configuration

This parameter determines when **eoc** terminal will be active. If this parameter is set to **Complete Cycle**, then the pulse is asserted on **eoc** terminal once when one sample has been taken from every analog input. The pulse is asserted after every ADC measurement if this parameter is set to **Per Sample**.

### Expose calibration

This checkbox can be used to expose the cal input analog pin for the calibration of the +/-64mV or +/-128mV ADC ranges. By default this option is **checked**.

### Voltage filtering type

This parameter can be used to set the filter type to be applied to power converter output voltage measurements. The average value is calculated as a running average which produces a new average with each scan that is the average of the previous N scans. The supported average filters are **None, 4 Average, 8 Average, 16 Average, 32 Average**.

### Auxiliary voltage filtering type

The Power Monitor component supports averaging of the power converter voltage and/or load current readings. This parameter can be used to set the filter type to be applied to auxiliary voltage measurements. The average value is calculated as a running average which produces a new average with each scan that is the average of the previous N scans. The supported average filters are **None, 4 Average, 8 Average, 16 Average, 32 Average**.

### Voltage sensing ADC range

This parameter can be used to select the ADC range for single-ended voltage measurements and for single-ended auxiliary voltage measurements. The available options are **0-4.096 V Range** and **0-2.048 V Range**.

### Voltage sensing ADC buffer mode

This parameter selects the ADC input buffer mode. Refer to DelSig ADC datasheet for detailed description of the buffers mode. This setting impacts only voltage measurement range. The available options are **Bypass Buffer** and **Level Shift**.



## Current filtering type

This parameter can be used to set the filter type to be applied to power converter load current measurement. The average value is calculated as a running average which produces a new average with each scan that is the average of the previous N scans. The supported average filters are **None**, **4 Average**, **8 Average**, **16 Average**, **32 Average**.

## Current sensing ADC range

This parameter can be used to select the ADC range for differential current measurements and for low range auxiliary voltage measurements. The available options are **+/-64 mV Range** and **+/-128 mV Range**.

## Fault sources

This list of check boxes can be used to set the over-current (OC), under-voltage (UV) and over-voltage (OV) fault sources. This setting applies to all configured power converters.

## Warning sources

This list of check boxes can be used to set the over-current (OC), under-voltage (UV) and over-voltage (OV) warning sources. This setting applies to all configured power converters.

## Power Converter Voltages Tab

This enables the user to describe the power converter voltages in the system. The figure below shows the voltage tab when Number of converters is set to **8** in the General Tab.

Converter	Name	Nominal voltage (V)	Voltage measurement type	UV fault threshold (V)	UV warning threshold (V)	OV warning threshold (V)	OV fault threshold (V)	Input scaling factor
V1	Converter 1	2.25	Single Ended	0.75	1.7	2.825	3	1
V2	Converter 2	2.25	Single Ended	0.75	1.7	2.825	3	1
V3	Converter 3	2.25	Single Ended	0.75	1.7	2.825	3	1
V4	Converter 4	2.25	Single Ended	0.75	1.7	2.825	3	1
V5	Converter 5	2.25	Single Ended	0.75	1.7	2.825	3	1
V6	Converter 6	2.25	Single Ended	0.75	1.7	2.825	3	1
V7	Converter 7	2.25	Single Ended	0.75	1.7	2.825	3	1
V8	Converter 8	2.25	Single Ended	0.75	1.7	2.825	3	1

### Import table

Imports data from file to table cells on active tab. Supports .csv file format. Keyboard shortcut – [Ctrl] [M]

### Export table

Exports data from table cells of active tab to file. Supports .csv file format. Keyboard shortcut – [Ctrl] [R].

### Import all

Executes import functionality for all three tables. Keyboard shortcut – [Ctrl] [Alt] [M]

### Export all

Executes export functionality for all three tables. Keyboard shortcut – [Ctrl] [Alt] [R].

### Parameters:

- **Name** – This is a text field to give the name for power converter. This is used only for annotation purposes. The maximum allowed characters are 16. By default this field is populated with the name “Converter x”.
- **Nominal Voltage** – This is the nominal converter output voltage. This is used only for annotation purposes. The nominal voltage range is **0.001 - 65.535 V**. By default this field is populated with a value 2.25.
- **Voltage measurement type** – This parameter determines type of voltage measurement for the power converter. The options are **Single Ended** or **Differential**. If **Differential** option is selected, then that power converter forfeits the current measurement. In this case, the symbol will display a terminal with name “rtn” which can be connected to reference ground point to measure the differential voltage.
- **UV fault threshold** – This parameter helps to set the **Under-Voltage (UV)** fault threshold for the specified power converter. The allowed fault threshold range is **0.001-65.535 V**. By default, the component will use this threshold value. The user can change the under-voltage fault threshold at run time using the provided API. Please refer API section for more details.
- **UV warning threshold** – This parameter helps to set the **Under-Voltage (UV)** warning threshold for the specified power converter. The allowed warning threshold range is **0.001-65.535 V**. By default, the component will use this threshold value. The user can change the under-voltage warning threshold at run time using the provided API. Please refer API section for more details.
- **OV warning threshold** – This parameter helps to set the **Over-Voltage (OV)** warning threshold for the specified power converter. The allowed warning threshold range is **0.001-65.535 V**. By default, the component will use this threshold value. The user can change the



over-voltage warning threshold at run time using the provided API. Please refer API section for more details.

- **OV fault threshold** – This parameter helps to set the **Over-Voltage (OV)** fault threshold for the specified power converter. The allowed fault threshold range is **0.001-65.535 V**. By default, the component will use this threshold value. The user can change the over-voltage fault threshold at run time using the provided API. Please refer API section for more details.
- **Input scaling factor** – This parameter sets the input voltage scaling factor for the specified power converter. This scaling factor indicates the amount of attenuation applied to the converter output voltage external to PSoC. The allowed range is **0.001- 1.000**. The default value is **1.000**.

## Power Converter Currents Tab

This tab enables the user to describe the power converter load currents in the system. Below figure shows the current tab when Number of converters parameter is set to 8 in the General Tab.

Configure 'PowerMonitor'

Name: PowerMonitor\_1

General | Power Converter Voltages | **Power Converter Currents** | Auxiliary Voltages | Built-in

Import table | Export table | Import all | Export all

Converter	Name	Nominal voltage (V)	Current measurement type	OC warning threshold (A)	OC fault threshold (A)	Shunt resistor value (mΩ)	CSA gain (V/ΔV)
I1	Converter 1	2.25	Direct	9	12	5	-
I2	Converter 2	2.25	Direct	9	12	5	-
I3	Converter 3	2.25	Direct	9	12	5	-
I4	Converter 4	2.25	Direct	9	12	5	-
I5	Converter 5	2.25	Direct	9	12	5	-
I6	Converter 6	2.25	Direct	9	12	5	-
I7	Converter 7	2.25	Direct	9	12	5	-
I8	Converter 8	2.25	Direct	9	12	5	-

Datasheet | OK | Apply | Cancel

### Parameters:

Many aspects of this tab inherit the features from the **Power Converter Voltages** tab. Below are the parameters affected:


- The **Name** column is a display propagating forward the parameters entered into the **Power Converter Voltages** tab.
- The **Nominal voltage** column is a display propagating forward the parameters entered into the **Power Converter Voltages** tab.

Any converter that was set to Voltage measurement type = Differential in the Power Converter Voltages Tab forfeits the capability to measure current. The associated row in this table will be grayed out and Current measurement type column entry will set to “None”.

- **Current measurement type** – This parameter sets the current measurement type for the specified power converter. The options are **None**, **Direct** or **CSA**.
- **OC warning threshold** – This parameter sets the over-current (OC) warning threshold. This entry will be grayed out if the associated **Current measurement type** is set to **None**.
- **OC fault threshold** – This parameter sets the over-current fault threshold. This entry is grayed out if the associated **Current measurement type** is set to **None**.
- **Shunt resistor value** – This parameter sets the shunt resistor value. The allowed range is **0.01 – 2500.00 mΩ**. This entry will be grayed out if the associated **Current measurement type** is set to **None**.
- **CSA gain** – This parameter sets the CSA differential to single ended gain. The allowed range is **1.00 – 500.00**. This entry is grayed out if the associated **Current measurement type** is set to **None** or **Direct**.

## Auxiliary Voltages Tab

The Auxiliary Voltages Tab enables the user to describe the auxiliary voltage inputs in the system. The number of rows shown in this tab depends on the Number of auxiliary channels entered in the General Tab.

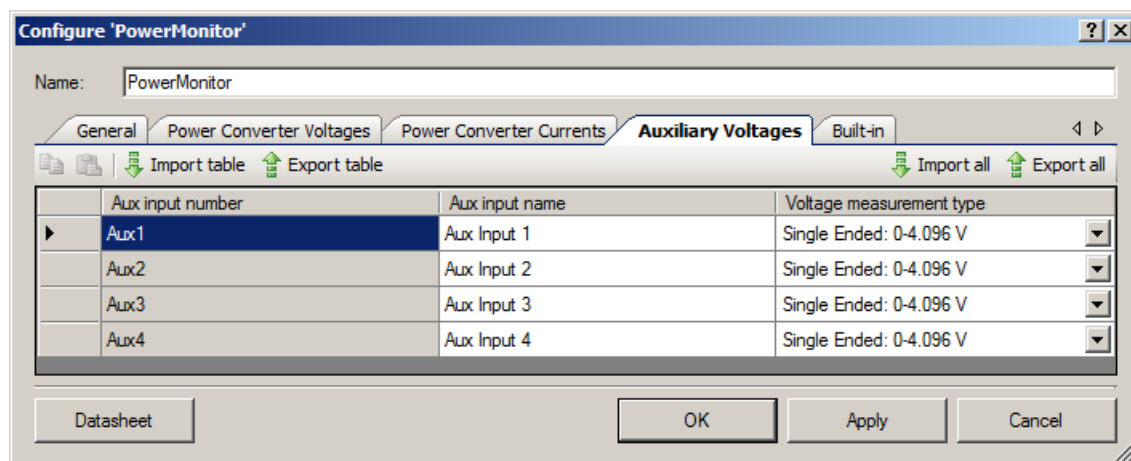

## Parameters:

- **Aux input name** – This is a text field to give the name for auxiliary channel. This is used only for annotation purposes. By default this field is blank.



- **Voltage measurement type** – This parameter selects the type of auxiliary voltage measurement. The options are:
  - ☐ Single Ended: 0-4.096 V or Single Ended: 0-2.048 V depending on the Voltage sensing ADC range parameter setting on the General tab.
  - ☐ Differential: +/- 2.048 V
  - ☐ Differential: +/- 64 mV or Differential: +/- 128 mV depending on the Current sensing ADC range parameter setting on the General tab.

## Application Programming Interface

Application Programming Interface (API) routines allow you to configure the component using software. The following table lists and describes the interface to each function. The subsequent sections cover each function in more detail.

By default, PSoC Creator assigns the instance name "PowerMonitor\_1" to the first instance of a component in a given design. You can rename it to any unique value that follows the syntactic rules for identifiers. The instance name becomes the prefix of every global function name, variable, and constant symbol. For readability, the instance name used in the following table is "PowerMonitor."

**Note:** When using PSoC3 silicon, the user should create a Keil .cyre reentrancy file and should add the CyIntSetVector(), CyIntSetPriority(), PowerMonitor\_PM\_AMux\_Current\_Unset() and PowerMonitor\_PM\_AMux\_Voltage\_Unset() APIs in this file to avoid reentrancy related warnings during project compilation.

## Functions

Function	Description
PowerMonitor_Start()	Initializes the Power Monitor with default customizer values.
PowerMonitor_Stop()	Disables the component. ADC sampling stops.
PowerMonitor_Init()	Initializes the component. Includes running self-calibration.
PowerMonitor_Enable()	Enables hardware blocks within the component and starts scanning.
PowerMonitor_EnableFault()	Enables generation of the fault signal.
PowerMonitor_DisableFault()	Disables generation of the fault signal.
PowerMonitor_SetFaultMode()	Configures fault sources from the component.
PowerMonitor_GetFaultMode()	Returns enabled fault sources from the component.
PowerMonitor_SetFaultMask()	Enables or disables faults from each power converter through a mask.
PowerMonitor_GetFaultMask()	Returns fault mask status of each power converter.
PowerMonitor_GetFaultSource()	Returns pending fault sources from the component.

Function	Description
PowerMonitor_GetOVFaultStatus()	Returns over voltage fault status of each power converter. The status is reported regardless of the Fault Mask.
PowerMonitor_GetUVFaultStatus()	Returns under voltage fault status of each power converter. The status is reported regardless of the Fault Mask.
PowerMonitor_GetOCFaultStatus()	Returns over current fault status of each power converter. The status is reported regardless of the Fault Mask.
PowerMonitor_EnableWarn()	Enables generation of the warning signal.
PowerMonitor_DisableWarn()	Disables generation of the warning signal.
PowerMonitor_SetWarnMode()	Configures warning sources from the component.
PowerMonitor_GetWarnMode()	Returns enabled warning sources from the component.
PowerMonitor_SetWarnMask()	Enables or disables warnings from each power converter through a mask.
PowerMonitor_GetWarnMask()	Returns warning mask status of each power converter.
PowerMonitor_GetWarnSource()	Returns pending warning sources from the component.
PowerMonitor_GetOVWarnStatus()	Returns over voltage warning status of each power converter. The status is reported regardless of the Warning Mask.
PowerMonitor_GetUVWarnStatus()	Returns under voltage warning status of each power converter. The status is reported regardless of the Warning Mask.
PowerMonitor_GetOCWarnStatus()	Returns over current warning status of each power converter. The status is reported regardless of the Warning Mask.
PowerMonitor_SetUVWarnThreshold()	Sets the power converter under voltage warning threshold for the specified power converter.
PowerMonitor_GetUVWarnThreshold()	Returns the power converter under voltage warning threshold for the specified power converter.
PowerMonitor_SetOVWarnThreshold()	Sets the power converter over voltage warning threshold for the specified power converter.
PowerMonitor_GetOVWarnThreshold()	Returns the power converter over voltage warning threshold for the specified power converter.
PowerMonitor_SetUVFaultThreshold()	Sets the power converter under voltage fault threshold for the specified power converter.
PowerMonitor_GetUVFaultThreshold()	Returns the power converter under voltage fault threshold for the specified power converter.
PowerMonitor_SetOVFaultThreshold()	Sets the power converter over voltage fault threshold for the specified power converter.
PowerMonitor_GetOVFaultThreshold()	Returns the power converter over voltage fault threshold for the specified power converter.

Function	Description
PowerMonitor_SetOCWarnThreshold()	Sets the power converter over current warning threshold for the specified power converter.
PowerMonitor_GetOCWarnThreshold()	Returns the power converter over current warning threshold for the specified power converter.
PowerMonitor_SetOCFaultThreshold()	Sets the power converter over current fault threshold for the specified power converter.
PowerMonitor_GetOCFaultThreshold()	Returns the power converter over current fault threshold for the specified power converter.
PowerMonitor_GetConverterVoltage()	Returns the power converter output voltage for the specified power converter.
PowerMonitor_GetConverterCurrent()	Returns the power converter load current for the specified power converter.
PowerMonitor_GetAuxiliaryVoltage()	Returns the voltage for the auxiliary input.
PowerMonitor_Calibrate()	Calibrates the ADC across the various range settings.
PowerMonitor_SetAuxiliarySampleMode()	Sets the ADC sample mode for the selected auxiliary input.
PowerMonitor_GetAuxiliarySampleMode()	Returns the ADC sample mode for the selected auxiliary input.
PowerMonitor_RequestAuxiliarySample()	Requests and returns a single unfiltered on-demand sample result of the specified auxiliary input.

### void PowerMonitor\_Start(void)

**Description:** Enables the component. Calls the Init() API if the component has not been initialized before. Calls Enable() API. This API requires global interrupts enabled in the CPU core. To enable global interrupts, call the enable global interrupt macro “CyGlobalIntEnable” in your *main.c* file before PowerMonitor\_Start() API is called.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

### void PowerMonitor\_Stop (void)

**Description:** Disables the component. ADC sampling stops.

**Parameters:** None

**Return Value:** None

**Side Effects:** pgood, warn, fault and eoc outputs are de-asserted

**void PowerMonitor\_Init(void)**

**Description:** Initializes the component. Includes running self-calibration

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void PowerMonitor\_Enable(void)**

**Description:** Enables hardware blocks within the component and starts scanning.

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void PowerMonitor\_EnableFault(void)**

**Description:** Enables generation of the fault signal. Specifically which fault sources are enabled is configured using the PowerMonitor\_SetFaultMode() and the PowerMonitor\_SetFaultMask() APIs. Fault signal generation is automatically enabled by Init().

**Parameters:** None

**Return Value:** None

**Side Effects:** None

**void PowerMonitor\_DisableFault(void)**

**Description:** Disables generation of the fault signal.

**Parameters:** None

**Return Value:** None

**Side Effects:** Fault output is de-asserted

**void PowerMonitor\_SetFaultMode(uint8 faultMode)**

**Description:** Configures fault sources from the component. Three fault sources are available: OV, UV and OC. This is set to the customizer setting by Init().

**Parameters:** uint8 faultMode

Bit Field	Enabled Fault Source
0: OV_FAULT	1=Enable OV fault
1: UV_FAULT	1=Enable UV fault
2: OC_FAULT	1=Enable OC fault
7:3	Reserved. Write with all zeroes

**Return Value:** None

**Side Effects:** None

**uint8 PowerMonitor\_GetFaultMode(void)**

**Description:** Returns enabled fault sources from the component

**Parameters:** None

**Return Value:**

Bit Field	Information
0: OV_FAULT	1=OV faults are enabled
1: UV_FAULT	1=UV faults are enabled
2: OC_FAULT	1=OC faults are enabled
7:3	Reserved. Returns all zeroes

**Side Effects:** None

**void PowerMonitor\_SetFaultMask(uint32 faultMask)**

**Description:** Enables or disables faults from each power converter through a mask. Masking applies to all fault sources. Masking applies for Fault generation and Power Good generation. By default all power converters have their fault masks enabled.

**Parameters:** uint32 faultMask

Bit Field	Enabled Fault Source
0	1=Enable faults from Power Converter 1
1	1=Enable faults from Power Converter 2
...	...
31	1=Enable faults from Power Converter 32

**Return Value:** None

**Side Effects:** None

**uint32 PowerMonitor\_GetFaultMask(void)**

**Description:** Returns fault mask status of each power converter. Masking applies to all fault sources

**Parameters:** None

**Return Value:** uint32 alertMask

Bit Field	Enabled Fault Source
0	1=Faults from Power Converter 1 are enabled
1	1=Faults from Power Converter 2 are enabled
...	...
31	1=Faults from Power Converter 32 are enabled

**Side Effects:** None

**uint8 PowerMonitor\_GetFaultSource(void)**

**Description:** Returns pending fault sources from the component. This API can be used to poll the fault status of the component. Alternatively, if the fault pin is used to generate interrupts to PSoC's CPU core, the interrupt service routine can use this API to determine the source of the fault. In either case, when this API returns a non-zero value, the GetOVFaultStatus(), GetUVFaultStatus() and GetOCFaultStatus() APIs can provide further information on which power converter(s) caused the fault. The fault source bits are sticky and are only cleared by calling the relevant Get Status APIs.

**Parameters:** None

**Return Value:**

Bit Field	Fault Source
0: OV_FAULT	1=OV fault occurred
1: UV_FAULT	1=UV fault occurred
2: OC_FAULT	1=OC fault occurred
7:3	Reserved. Returns all zeroes

**Side Effects:** None

**uint32 PowerMonitor\_GetOVFaultStatus(void)**

**Description:** Returns over voltage fault status of each power converter. The status is reported regardless of the Fault Mask.

**Parameters:** None

**Return Value:** uint32 ovFaultStatus

Bit Field	OV Fault Status
0	1=OV fault condition on Power Converter 1
1	1=OV fault condition on Power Converter 2
...	...
31	1=OV fault condition on Power Converter 32

**Side Effects:** Calling this API clears the fault condition source sticky bits. If the condition still persists then the bit will be set again after the next scan.

**uint32 PowerMonitor\_GetUVFaultStatus(void)**

**Description:** Returns under voltage fault status of each power converter. The status is reported regardless of the Fault Mask.

**Parameters:** None

**Return Value:** uint32 uvFaultStatus

Bit Field	UV Fault Status
0	1=UV fault condition on Power Converter 1
1	1=UV fault condition on Power Converter 2
...	...
31	1=UV fault condition on Power Converter 32

**Side Effects:** Calling this API clears the fault condition source sticky bits. If the condition still persists then the bit will be set again after the next scan.

**uint32 PowerMonitor\_GetOCFaultStatus(void)**

**Description:** Returns over current fault status of each power converter. The status is reported regardless of the Fault Mask.

**Parameters:** None

**Return Value:** uint32 ocFaultStatus

Bit Field	OC Fault Status
0	1=OC fault condition on Power Converter 1
1	1=OC fault condition on Power Converter 2
...	...
31	1=OC fault condition on Power Converter 32

**Side Effects:** Calling this API clears the fault condition source sticky bits. If the condition still persists then the bit will be set again after the next scan.

**void PowerMonitor\_EnableWarn(void)**

**Description:** Enables generation of the warning signal. Specifically which warning sources are enabled is configured using the PowerMonitor\_SetWarnMode() and the PowerMonitor\_SetWarnMask() APIs. Warning signal generation is automatically enabled by Init().

**Parameters:** None

**Return Value:** None

**Side Effects:** None



**void PowerMonitor\_DisableWarn(void)****Description:** Disables generation of the warning signal**Parameters:** None**Return Value:** None**Side Effects:** Warning output is de-asserted**void PowerMonitor\_SetWarnMode(uint8 warnMode)****Description:** Configures warning sources from the component. Three warning sources are available: OV, UV and OC. This is set to the customizer setting by Init().**Parameters:** uint8 warnMode

Bit Field	Enabled Warning Source
0: OV_WARN	1=Enable OV warnings
1: UV_WARN	1=Enable UV warnings
2: OC_WARN	1=Enable OC warnings
7:3	Reserved. Write with all zeroes

**Return Value:** None**Side Effects:** None**uint8 PowerMonitor\_GetWarnMode(void)****Description:** Returns enabled warning sources from the component**Parameters:** None**Return Value:**

Bit Field	Information
0: OV_WARN	1=OV warnings are enabled
1: UV_WARN	1=UV warnings are enabled
2: OC_WARN	1=OC warnings are enabled
7:3	Reserved. Returns all zeroes

**Side Effects:** None

**void PowerMonitor\_SetWarnMask(uint32 warnMask)**

**Description:** Enables or disables warnings from each power converter through a mask. Masking applies to all warning sources. By default all power converters have their warning masks enabled.

**Parameters:** uint32 warnMask

Bit Field	Enabled Warning Source
0	1=Enable warnings from Power Converter 1
1	1=Enable warnings from Power Converter 2
...	...
31	1=Enable warnings from Power Converter 32

**Return Value:** None

**Side Effects:** None

**uint32 PowerMonitor\_GetWarnMask(void)**

**Description:** Returns warning mask status of each power converter. Masking applies to all warning sources

**Parameters:** None

**Return Value:** uint32 warnMask

Bit Field	Enabled Warning Source
0	1=Warnings from Power Converter 1 are enabled
1	1= Warnings from Power Converter 2 are enabled
...	...
31	1= Warnings from Power Converter 32 are enabled

**Side Effects:** None

**uint8 PowerMonitor\_GetWarnSource(void)**

**Description:** Returns pending warning sources from the component. This API can be used to poll the warning status of the component. Alternatively, if the warning pin is used to generate interrupts to PSoC's CPU core, the interrupt service routine can use this API to determine the source of the warning. In either case, when this API returns a non-zero value, the GetOVWarnStatus(), GetUVWarnStatus() and GetOCWarnStatus() APIs can provide further information on which power converter(s) caused the warning.

**Parameters:** None

**Return Value:**

Bit Field	Warning Source
0: OV_WARN	1=OV warning occurred
1: UV_WARN	1=UV warning occurred
2: OC_WARN	1=OC warning occurred
7:3	Reserved. Returns all zeroes

**Side Effects:** None

**uint32 PowerMonitor\_GetOVWarnStatus(void)**

**Description:** Returns over voltage warning status of each power converter. The status is reported regardless of the Warning Mask.

**Parameters:** None

**Return Value:** uint32 ovWarnStatus

Bit Field	OV Warning Status
0	1=OV warning condition on Power Converter 1
1	1=OV warning condition on Power Converter 2
...	...
31	1=OV warning condition on Power Converter 32

**Side Effects:** Calling this API clears the warning condition source sticky bits. If the condition still persists then the bit will be set again after the next scan.

**uint32 PowerMonitor\_GetUVWarnStatus(void)**

**Description:** Returns under voltage warning status of each power converter. The status is reported regardless of the Warning Mask.

**Parameters:** None

**Return Value:** uint32 uvWarnStatus

Bit Field	UV fault status
0	1=UV warning condition on Power Converter 1
1	1=UV warning condition on Power Converter 2
...	...
31	1=UV warning condition on Power Converter 32

**Side Effects:** Calling this API clears the warning condition source sticky bits. If the condition still persists then the bit will be set again after the next scan.

**uint32 PowerMonitor\_GetOCWarnStatus(void)**

**Description:** Returns over current warning status of each power converter. The status is reported regardless of the Warning Mask.

**Parameters:** None

**Return Value:** uint32 ocWarnStatus

Bit Field	OC Warning Status
0	1=OC warning condition on Power Converter 1
1	1=OC warning condition on Power Converter 2
...	...
31	1=OC warning condition on Power Converter 32

**Side Effects:** Calling this API clears the warning condition source sticky bits. If the condition still persists then the bit will be set again after the next scan.

**void PowerMonitor\_SetUVWarnThreshold(uint8 converterNum, uint16 uvWarnThreshold)**

- Description:** Sets the power converter under voltage warning threshold for the specified power converter
- Parameters:** uint8 converterNum  
Specifies the converter number  
Valid range: 1..32
- uint16 uvWarnThreshold  
Specifies the under voltage warning threshold in mV  
The range of this value is runtime checked if this value exceeds maximum range API does nothing. Use API PowerMonitor\_GetUVWarnThreshold for checking valid range.
- Return Value:** None
- Side Effects:** None

**uint16 PowerMonitor\_GetUVWarnThreshold(uint8 converterNum)**

- Description:** Returns the power converter under voltage warning threshold for the specified power converter
- Parameters:** uint8 converterNum  
Specifies the converter number  
Valid range: 1..32
- Return Value:** uint16 uvWarnThreshold  
The under voltage warning threshold in mV
- Side Effects:** None

**void PowerMonitor\_SetOVWarnThreshold(uint8 converterNum, uint16 ovWarnThreshold)**

- Description:** Sets the power converter over voltage warning threshold for the specified power converter
- Parameters:** uint8 converterNum  
Specifies the converter number  
Valid range: 1..32
- uint16 ovWarnThreshold  
Specifies the over voltage warning threshold in mV  
The range of this value is runtime checked if this value exceeds maximum range API does nothing. Use API PowerMonitor\_GetOVWarnThreshold for checking valid range.
- Return Value:** None
- Side Effects:** None

**uint16 PowerMonitor\_GetOVWarnThreshold(uint8 converterNum)**

<b>Description:</b>	Returns the power converter under voltage warning threshold for the specified power converter
<b>Parameters:</b>	uint8 converterNum Specifies the converter number Valid range: 1..32
<b>Return Value:</b>	uint16 ovWarnThreshold The over voltage warning threshold in mV
<b>Side Effects:</b>	None

**void PowerMonitor\_SetUVFaultThreshold(uint8 converterNum, uint16 uvFaultThreshold)**

<b>Description:</b>	Sets the power converter under voltage fault threshold for the specified power converter
<b>Parameters:</b>	uint8 converterNum Specifies the converter number Valid range: 1..32  uint16 uvFaultThreshold Specifies the under voltage fault threshold in mV The range of this value is runtime checked if this value exceeds maximum range API does nothing. Use API PowerMonitor_GetUVFaultThreshold for checking valid range.
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**uint16 PowerMonitor\_GetUVFaultThreshold(uint8 converterNum)**

<b>Description:</b>	Returns the power converter under voltage fault threshold for the specified power converter
<b>Parameters:</b>	uint8 converterNum Specifies the converter number Valid range: 1..32
<b>Return Value:</b>	uint16 uvFaultThreshold The under voltage fault threshold in mV
<b>Side Effects:</b>	None

**void PowerMonitor\_SetOVFaultThreshold(uint8 converterNum, uint16 ovFaultThreshold)**

**Description:** Sets the power converter over voltage fault threshold for the specified power converter

**Parameters:** uint8 converterNum  
Specifies the converter number  
Valid range: 1..32

uint16 ovFaultThreshold  
Specifies the over voltage fault threshold in mV  
The range of this value is runtime checked if this value exceeds maximum range API does nothing. Use API PowerMonitor\_GetOVFaultThreshold for checking valid range.

**Return Value:** None

**Side Effects:** None

**uint16 PowerMonitor\_GetOVFaultThreshold(uint8 converterNum)**

**Description:** Returns the power converter under voltage fault threshold for the specified power converter

**Parameters:** uint8 converterNum  
Specifies the converter number  
Valid range: 1..32

**Return Value:** uint16 ovFaultThreshold  
The over voltage fault threshold in mV

**Side Effects:** None

**void PowerMonitor\_SetOCWarnThreshold(uint8 converterNum, float ocWarnThreshold)**

**Description:** Sets the power converter over current warning threshold for the specified power converter

**Parameters:** uint8 converterNum  
Specifies the converter number  
Valid range: 1..32

float ocWarnThreshold  
Specifies the over current warning threshold in Amperes.  
The range of this value is runtime checked if this value exceeds maximum range API does nothing. Use API PowerMonitor\_GetOCWarnThreshold for checking valid range.

**Return Value:** None

**Side Effects:** None

**float PowerMonitor\_GetOCWarnThreshold(uint8 converterNum)**

<b>Description:</b>	Returns the power converter over current warning threshold for the specified power converter
<b>Parameters:</b>	uint8 converterNum Specifies the converter number Valid range: 1..32
<b>Return Value:</b>	float ocWarnThreshold The over current warning threshold in Amperes
<b>Side Effects:</b>	None

**void PowerMonitor\_SetOCFaultThreshold(uint8 converterNum, float ocFaultThreshold)**

<b>Description:</b>	Sets the power converter over current fault threshold for the specified power converter
<b>Parameters:</b>	uint8 converterNum Specifies the converter number Valid range: 1..32  float ocFaultThreshold Specifies the over current fault threshold in Amperes. The range of this value is runtime checked if this value exceeds maximum range API does nothing. Use API PowerMonitor_GetOCFaultThreshold for checking valid range.
<b>Return Value:</b>	None
<b>Side Effects:</b>	None

**float PowerMonitor\_GetOCFaultThreshold(uint8 converterNum)**

<b>Description:</b>	Returns the power converter over current fault threshold for the specified power converter
<b>Parameters:</b>	uint8 converterNum Specifies the converter number Valid range: 1..32
<b>Return Value:</b>	float ocFaultThreshold The over current fault threshold in Amperes.
<b>Side Effects:</b>	None

**uint16 PowerMonitor\_GetConverterVoltage(uint8 converterNum)**

- Description:** Returns the power converter output voltage for the specified power converter. If averaging is enabled the value returned is the average value.
- Parameters:** uint8 converterNum  
Specifies the converter number  
Valid range: 1..32
- Return Value:** uint16 converterVoltage  
The converter output voltage in mV
- Side Effects:** None

**float PowerMonitor\_GetConverterCurrent(uint8 converterNum)**

- Description:** Returns the power converter load current for the specified power converter. If averaging is enabled the value returned is the average value.
- Parameters:** uint8 converterNum  
Specifies the converter number  
Valid range: 1..32
- Return Value:** float converterCurrent  
The converter output current floating point value in Amperes.
- Side Effects:** None

**float PowerMonitor\_GetAuxiliaryVoltage(uint8 auxNum)**

- Description:** Returns the voltage for auxiliary input in units of Volts (V) independent of the ADC range setting for aux inputs.
- Parameters:** uint8 auxNum  
Specifies the converter number  
Valid range: 1..4
- Return Value:** float auxVoltage  
Auxiliary voltage in the units of Volts(V).
- Side Effects:** None

**void PowerMonitor\_Calibrate(void)**

**Description:** Calibrates the ADC across the various range settings. If “cal” input pin is exposed, then a valid voltage should be provided to this input pin. The cal voltage should not exceed 100% of ADC range (+/-64mV or +/-128mV) as specified in the General tab window. This voltage will be used to calibrate the low range (either +/-64mV or +/-128mV) ADC configurations.

**Parameters:** None

**Return Value:** None

**Side Effects:** ADC measurement of voltages and currents is temporarily suspended during this operation.

**void PowerMonitor SetAuxiliarySampleMode(uint8 auxNum, uint8 sampleMode)**

**Description:** Sets the ADC sample mode for the selected auxiliary input. Note: all auxiliary inputs are set to continuous sampling mode by default.

**Parameters:** uint8 auxNum  
Specifies the auxiliary voltage input number  
Valid range: 1..4  
uint8 sampleMode  
Specifies the sample mode

Value	Description
0	Continuous
1	On Demand

**Return Value:** None

**Side Effects:** When On Demand sampling is selected, auxiliary input filtering is disabled  
Changing the auxiliary input sample mode impacts the overall sample rate for the power converters

**uint8 PowerMonitor GetAuxiliarySampleMode(uint8 auxNum)**

**Description:** Returns the ADC sample mode for the selected auxiliary input.

**Parameters:** uint8 auxNum  
Specifies the auxiliary voltage input number  
Valid range: 1..4

**Return Value:** uint8 sampleMode  
Specifies the sample mode

Value	Description
0	Continuous
1	On Demand

**Side Effects:** None

**float PowerMonitor RequestAuxiliarySample(uint8 auxNum)**

**Description:** Requests and returns a single unfiltered on-demand sample result of the specified auxiliary input. Calling this API will cause the normal ADC conversion sequence to be interrupted in order to obtain the requested sample as soon as possible. The API may also be called when the auxiliary input sample mode is set to continuous. It doesn't affect on continuous auxiliary measurements.

**Parameters:** uint8 auxNum  
Specifies the auxiliary voltage input number  
Valid range: 1..4

**Return Value:** Float value indicating the unfiltered output voltage for one of the four auxiliary inputs.

**Side Effects:** Calling this API impacts the overall sample rate for the power converters.

**Global Variables**

Variable	Description
PowerMonitor_initVar	This global variable is used to indicate whether the PowerMonitor has been initialized.
PowerMonitor_initThreshold	This global variable is used to indicate whether the PowerMonitor threshold levels have been initialized. Please refer the PowerMonitor component datasheet for detailed description.
PowerMonitor_iirInit	This global variable is used to indicate whether the PowerMonitor calibration filters have been initialized. Please refer the PowerMonitor component datasheet for detailed description.
PowerMonitor_warnWin	This structure variable is used to hold the user provided over voltage, under voltage and over current warning threshold values for each of the power converters.

Variable	Description
PowerMonitor_faultWin	This structure variable is used to hold the user provided over voltage, under voltage and over current fault threshold values for each of the power converters.
PowerMonitor_adcConvNow	This global variable indicates the power converter for which conversion is in progress.
PowerMonitor_adcConvNext	This global variable indicates the power converter which is scheduled for next conversion.
PowerMonitor_adcConvNextPreCal	This global variable holds the next converter number before switching to calibration process if requested.
PowerMonitor_adcConvCallType	This indicates the calibration type is in progress.
PowerMonitor_faultMask	Holds the fault mask value for each of the power converters.
PowerMonitor_warnMask	Holds the warning mask value for each of the power converter
PowerMonitor_faultEnable	Holds the fault enable/disable state for the component.
PowerMonitor_warnEnable	Holds the warning enable/disable state for the component.
PowerMonitor_warnSources	Holds the warning sources set for the component.
PowerMonitor_faultSources	Holds the fault sources set for the component.
PowerMonitor_OVWarnStatus	Holds the over voltage warning status for each of the power converter.
PowerMonitor_UVWarnStatus	Holds the under voltage warning status for each of the power converter.
PowerMonitor_OCWarnStatus	Holds the over current warning status for each of the power converter.
PowerMonitor_OVFaultStatus	Holds the over voltage fault status for each of the power converter.
PowerMonitor_UVFaultStatus	Holds the under voltage fault status for each of the power converter.
PowerMonitor_OCFaultStatus	Holds the over current fault status for each of the power converter.

## Usable Constants

Constant	Description
PowerMonitor_NUM_CONVERTERS	Number of converters to be monitored. Range: 1..32.
PowerMonitor_NUM_AUX_INPUTS	Number of auxiliary input voltages to measure. Range: 0..4.

## Macro Callbacks

Macro callbacks allow users to execute code from the API files that are automatically generated by PSoC Creator. Refer to the PSoC Creator Help and *Component Author Guide* for the more details.

In order to add code to the macro callback present in the component's generated source files, perform the following:

- Define a macro to signal the presence of a callback (in *cyapicallbacks.h*). This will “uncomment” the function call from the component's source code.
- Write the function declaration (in *cyapicallbacks.h*). This will make this function visible by all the project files.
- Write the function implementation (in any user file).

Callback Function <sup>[1]</sup>	Associated Macro	Description
PowerMonitor_ISR_EntryCallback	PowerMonitor_ISR_ENTRY_CALLBACK	Used at the beginning of the PowerMonitor_ISR() interrupt handler to perform additional application-specific actions.
PowerMonitor_ISR_ExitCallback	PowerMonitor_ISR_EXIT_CALLBACK	Used at the end of the PowerMonitor_ISR() interrupt handler to perform additional application-specific actions.

## Sample Firmware Source Code

PSoC Creator provides numerous example projects that include schematics and example code in the Find Example Project dialog. For component-specific examples, open the dialog from the Component Catalog or an instance of the component in a schematic. For general examples, open the dialog from the Start Page or **File** menu. As needed, use the **Filter Options** in the dialog to narrow the list of projects available to select.

Refer to the "Find Example Project" topic in the PSoC Creator Help for more information.

## MISRA Compliance

This section describes the MISRA-C:2004 compliance and deviations for the component. There are two types of deviations defined:

- project deviations – deviations that are applicable for all PSoC Creator components
- specific deviations – deviations that are applicable only for this component

---

<sup>1</sup> The callback function name is formed by component function name optionally appended by short explanation and “Callback” suffix.

This section provides information on component-specific deviations. Project deviations are described in the MISRA Compliance section of the *System Reference Guide* along with information on the MISRA compliance verification environment.

The PowerMonitor component has not been verified for MISRA-C:2004 coding guidelines compliance.

## API Memory Usage

The component memory usage varies significantly, depending on the compiler, device, number of APIs used and component configuration. The following table provides the memory usage for all APIs available in the given component configuration.

The measurements have been done with the associated compiler configured in Release mode with optimization set for Size. For a specific design the map file generated by the compiler can be analyzed to determine the memory usage.

Configuration	PSoC 3 (Keil_PK51)		PSoC 5LP (GCC)	
	Flash Bytes	SRAM Bytes	Flash Bytes	SRAM Bytes
Default	8952	1064	7994	379

## Functional Description

The Power Monitor component is intended for designers of Power Supervisors who want to quickly and easily design a full-featured power monitor without having to learn the low-level details of PSoC's analog subsystem, manually setting up and configuring the ADC, configuring analog input multiplexers or worrying about calibration issues. Users can configure exactly the functionality they need for their application graphically using the component customizer. The component will take care of the implementation details for you automatically.

The component uses the 1.024 V internal precision voltage reference and multiplies it by 2 using a PGA to generate a 2.048 V offset resulting in a single ended voltage measurement range of 0 - 4.096 V using the DelSig ADC block. Differential voltage measurement range is +/- 64 mV or 128 mV.

The component supports self-calibration. Calibration will be done during initialization and then at any time when requested by firmware. The calibration is designed such that it can be done with minimal interference to the power converter sampling process.

For both voltage and current measurements, averaging of the measurements is supported. The average value is calculated as a running average, which produces a new average with each scan that is the average of the previous N scans. When averaging is enabled, the average value is used in all cases where the value of the measurement is needed (faults, warning, power good and the reading of the measurement with APIs).



## Resources

This component is largely implemented in firmware. The only hardware blocks consumed are the ADC DeISig, control register and the PGA for generating the internal reference for single ended measurements.

This component operates as a background task through a repetitively called, mid-priority interrupt service routine. Designers using this component should be aware that non-interrupt driven tasks such as APIs or functions called from main() or elsewhere in the firmware, will run slower than might be expected as a result. It is therefore suggested that the CPU clock be set to at least 24 MHz to ensure adequate execution times. If other time-critical interrupt sources are required in the same design, they can be set to a higher priority to meet system performance goals.

Configuration	Resource Type				
	PGA	ADC_DeISig	Macrocells	Control Cells	Interrupts
Default	1	1	4	2	1

## DC and AC Electrical Characteristics

Specifications are valid for  $-40\text{ }^{\circ}\text{C} \leq T_A \leq 85\text{ }^{\circ}\text{C}$  and  $T_J \leq 100\text{ }^{\circ}\text{C}$ , except where noted.

Specifications are valid for 1.71 V to 5.5 V, except where noted.

Parameter	Description	Conditions	Min	Typ	Max	Units
ADC <sub>Acc</sub>	ADC measurement accuracy	Error sources internal to PSoC over the entire operating temperature range when the calibration API is called periodically and when <b>cal</b> analog input is used. Accuracy of external components must be factored in to obtain system level accuracy	-	0.26	-	%
T <sub>CONV</sub>	ADC conversion time per measurement	Average conversion time per measurement including ADC reconfiguration time (e.g. single ended-differential) when CPU and component clock is set to the maximum frequency.	-	150	300	μs

## Component Errata

This section lists known problems with the component.

Cypress ID	Component Version	Problem	Workaround
191257	1.50	This component version was modified without a version number change in PSoC Creator 3.0 SP1. For more information, see Knowledge Base Article KBA94159 ( <a href="http://www.cypress.com/go/kba94159">www.cypress.com/go/kba94159</a> ).	There is no workaround. You must update to the latest version of the component.

## Component Changes

This section lists the major changes in the component from the previous version.

Version	Description of Changes	Reason for Changes / Impact
1.60.c	Minor datasheet edits.	
1.60.b	Enabled component to be nested into other components.	Support for hierarchical component design.
1.60.a	Datasheet update.	Added Macro Callbacks section.
1.60	Corrected the component changes made in PSoC Creator 3.0 SP1.	Correction of the Component Errata item – Cypress ID 191257.
1.50.b	Added a note that global interrupts must be enabled before Start() API is called.	If global interrupts are not enabled, there could be an issue with initialization of the component.
1.50.a	Edited datasheet to remove references to PSoC 5.	PSoC 5 has been replaced by the PSoC 5LP.
1.50	Fixed the calibration procedure by modifying the routing algorithm.	The routing used for calibration was not optimal which resulted in a loss of precision. The updated implementation will result in more accurate results.
	Added an initialization value for the “status” variable.	Initialization added to remove a compiler warning.
1.40	Added Load / Save configuration commands.	Usability enhancement.
	Added SetAuxiliarySampleMode(), GetAuxiliarySampleMode(), RequestAuxiliarySample() APIs	These APIs allows you to remove/add auxiliary channels from the scan sequence as well as measure auxiliary channel in infrequent, out of order way.
	Added Voltage sensing ADC buffer mode option to select Level Shift (default) or Bypass Buffer mode.	Bypass Buffer mode is useful for signals measured signal If the “Bypass Buffer” mode is selected, the buffer will be disabled to reduce overall power consumption.
	EOC output made configurable.	User can specify whether the pulse is asserted after every ADC measurement (Complete Cycles) or just once when



Version	Description of Changes	Reason for Changes / Impact
		one sample has been obtained from all specified inputs (Per Sample).
1.30	Added MISRA Compliance section.	The component was not verified for MISRA compliance.
1.20	Added NUMBER_OF_CONVERTERS definition	
	Added global value iirInIt and initThreshold	
	Changed component macros to 8, 16, 32 channels	
	Added macros for interrupt management	
	Added hiding for fault/warn pin when sources are unchecked. Added Greying-out column when fault/warn sources are unchecked.	
	Corrected definitions for Verilog registers	
	Fixed component output signals startup conditions	
	Added 0-2.048 single-ended voltage measurement range	
	Added URL to online datasheet	
1.10	Added support for PSoC5 LP silicon	
	Updates to Resources section in the datasheet.	

© Cypress Semiconductor Corporation, 2014-2017. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spansion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spansion, the Spansion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit [cypress.com](http://cypress.com). Other names and brands may be claimed as property of their respective owners.

